 
 
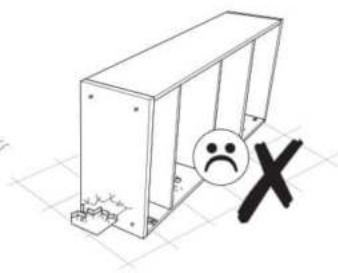 
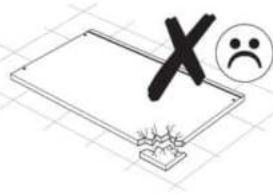 
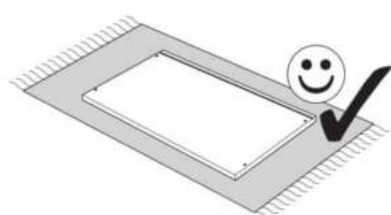 
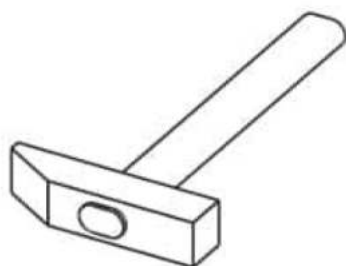 
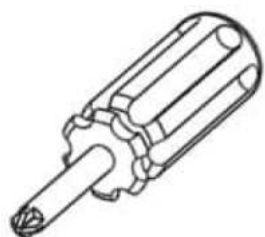 
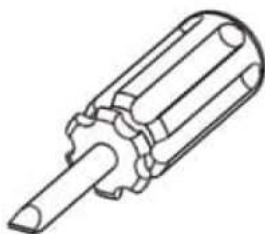 
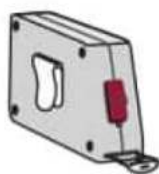 
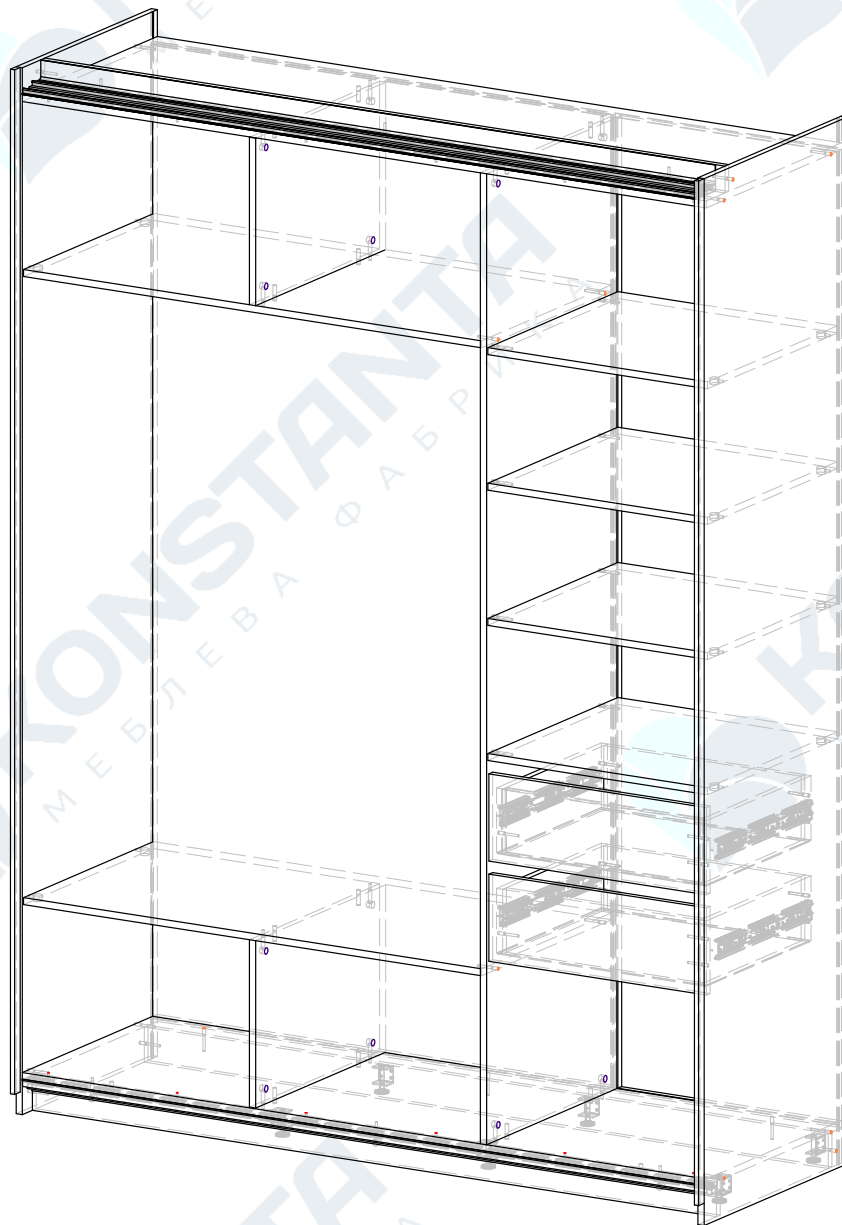 
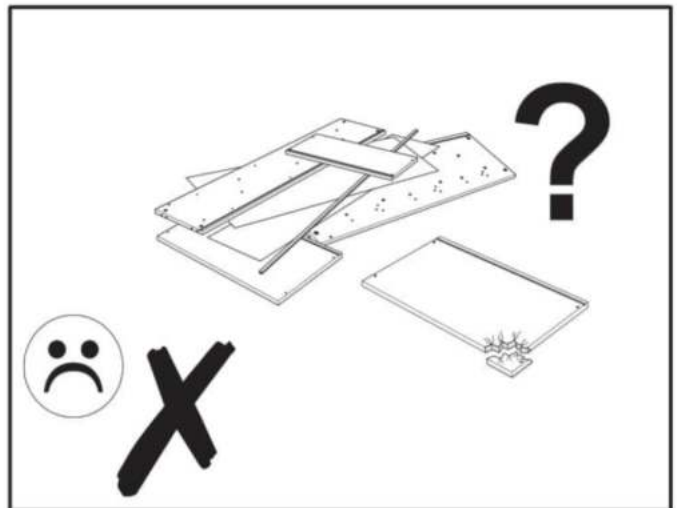 
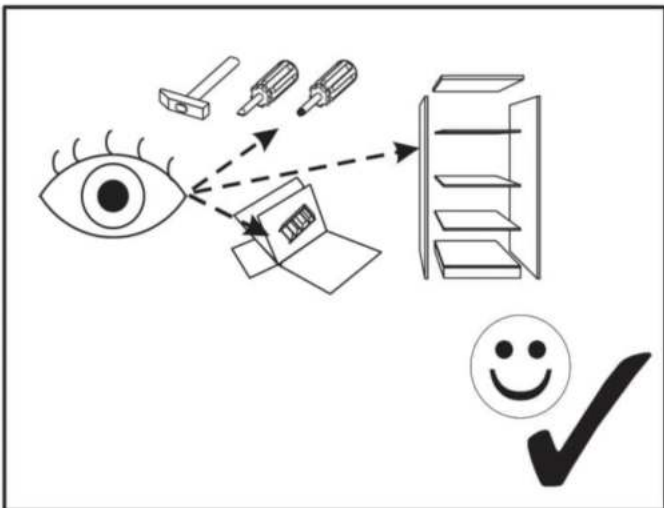 
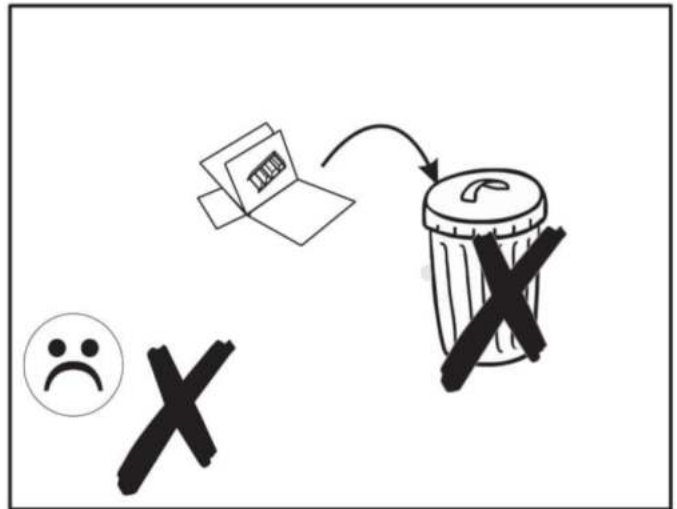 
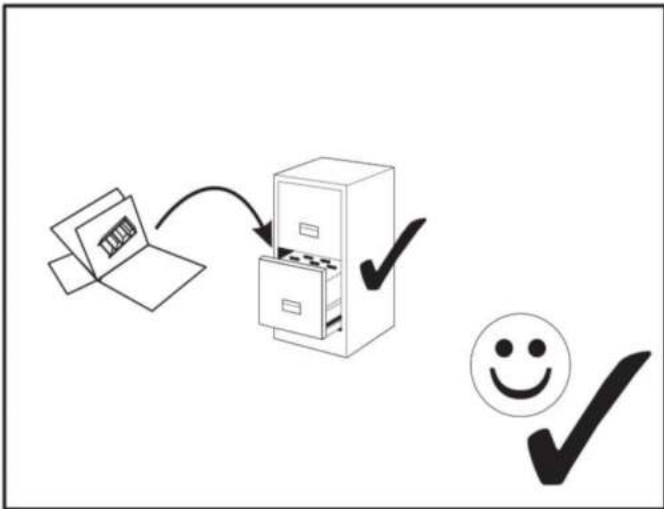 




ERGOSENS LUX

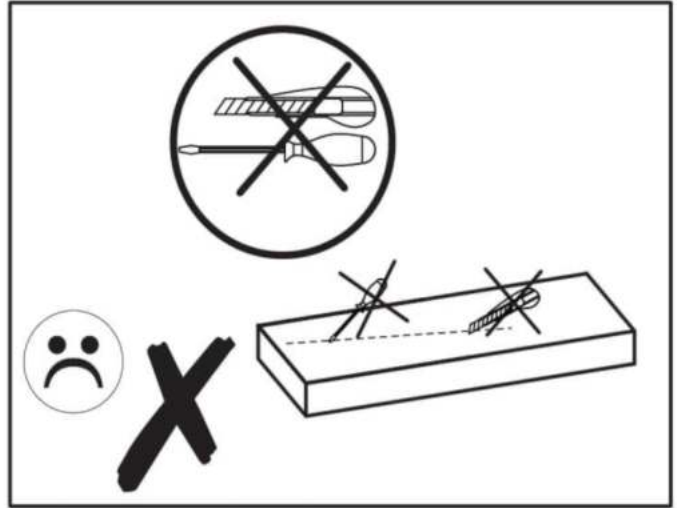

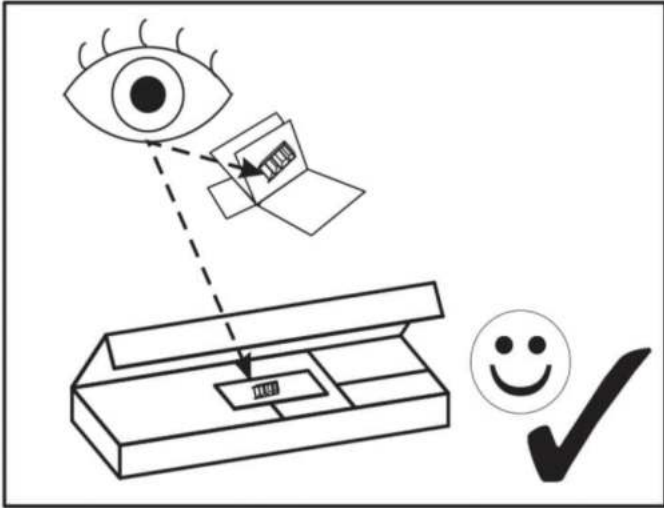


Що знадобиться для збирання.

A1 	A2 	B1 
C1  15mm	D1 	E1 
E2 	F1 	G1 
H1 	I1 	J1 
K1  30mm	L1  25mm	

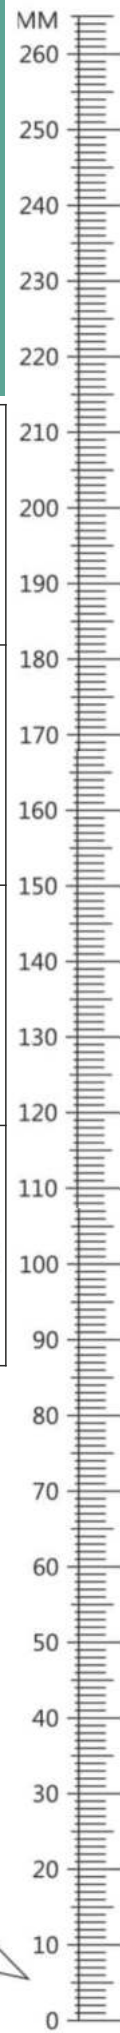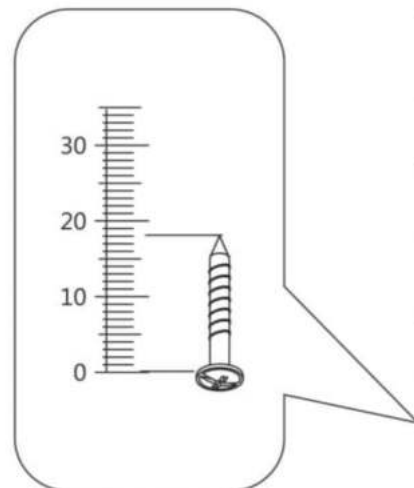  




Елементи меблів.

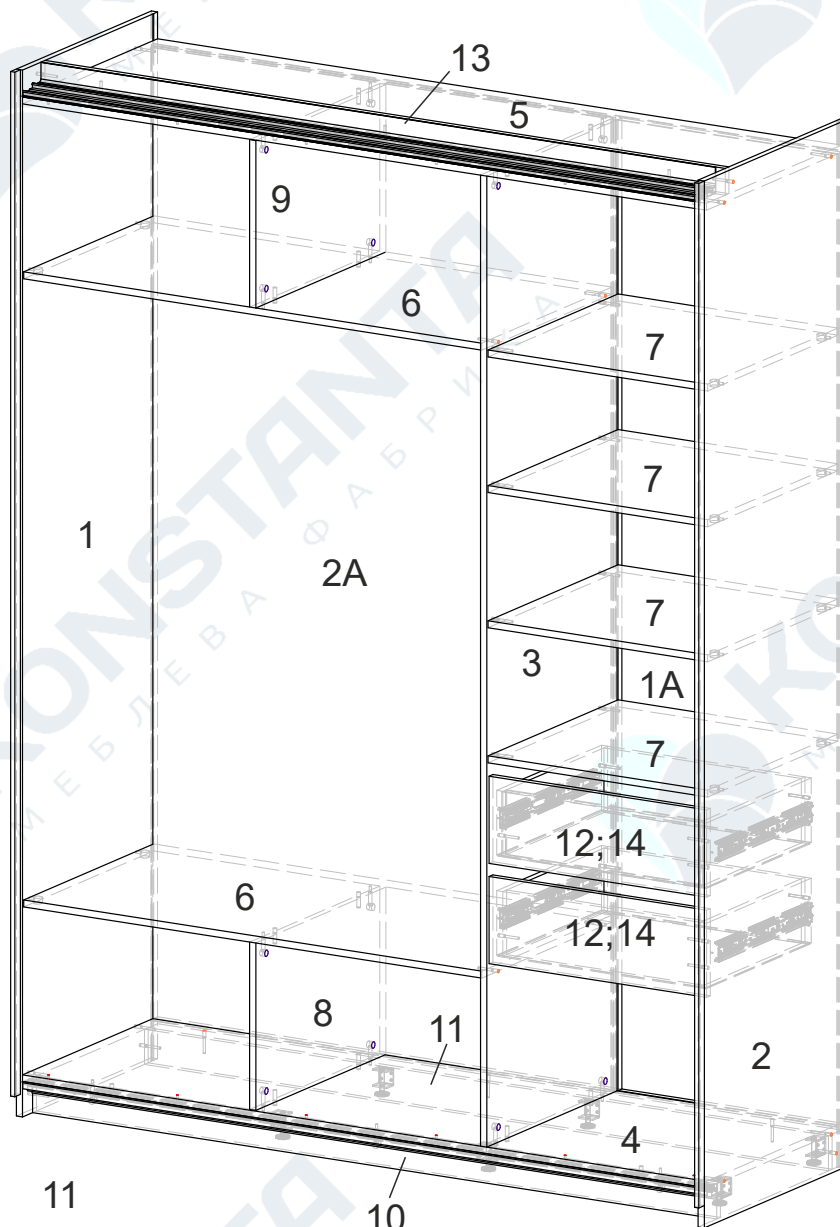 


1	2400	616	1
2	2400	580	1
3	2227	580	1
4	1768	580	1
5	1768	580	1
6	1184	559	2
7	568	559	4
8	384	559	1
9	384	559	1
10	80	1768	1
11	80	1768	1
12	199	561	2
13	61	1768	1
14	Шухлядки		2
15	Двері передні		1
16	Двері задні		1

1A	2237	569	1
2A	2237	1194	1

   
1

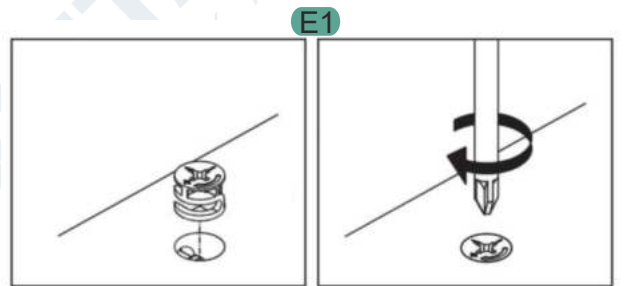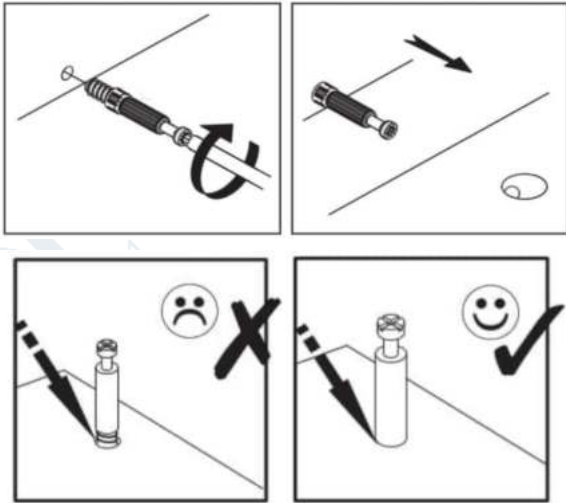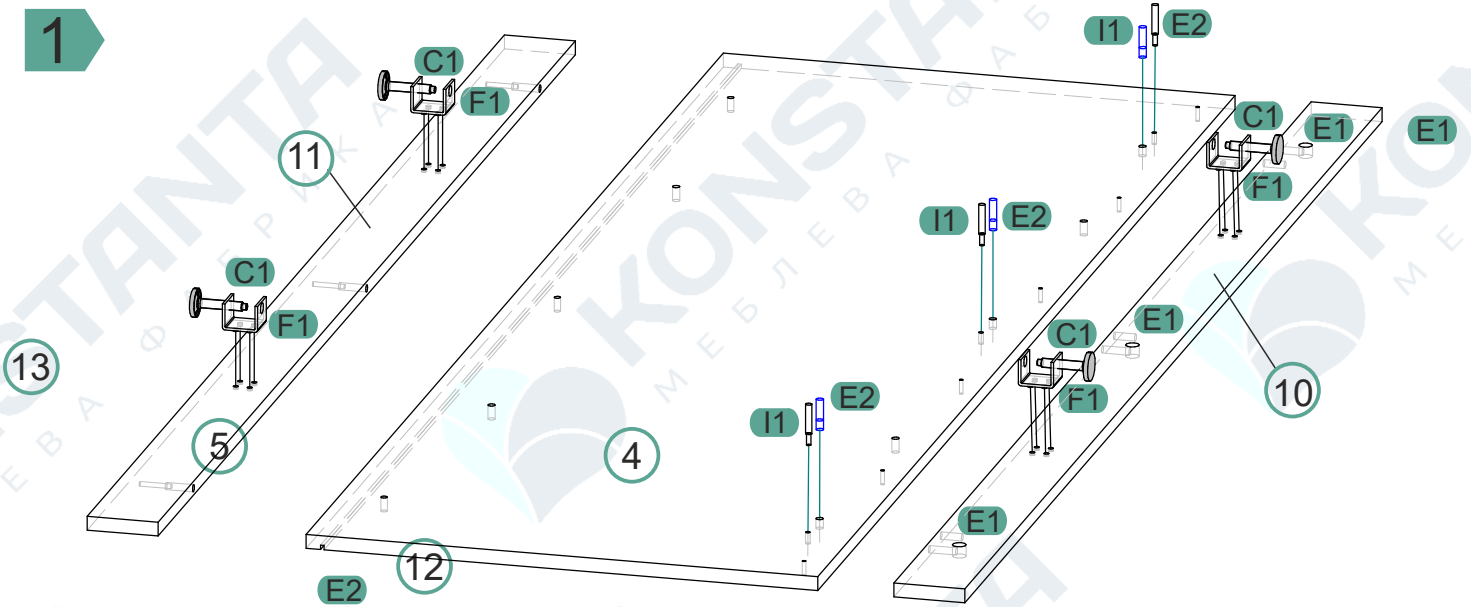


2

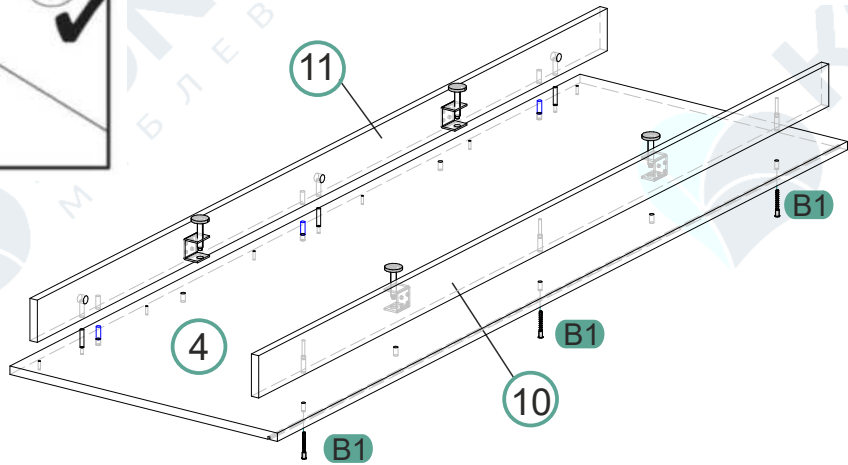 


3


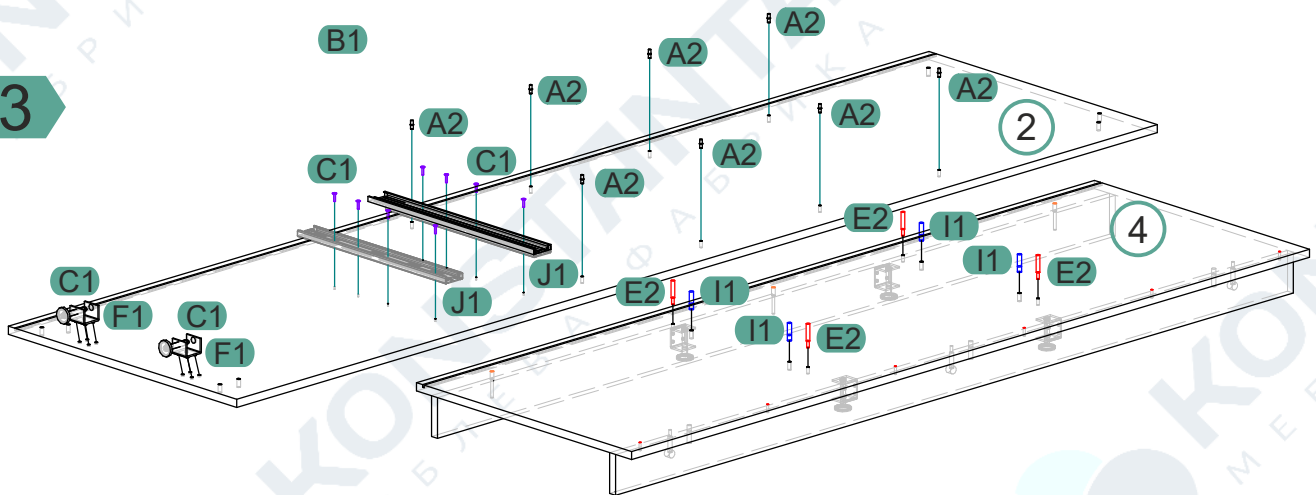 


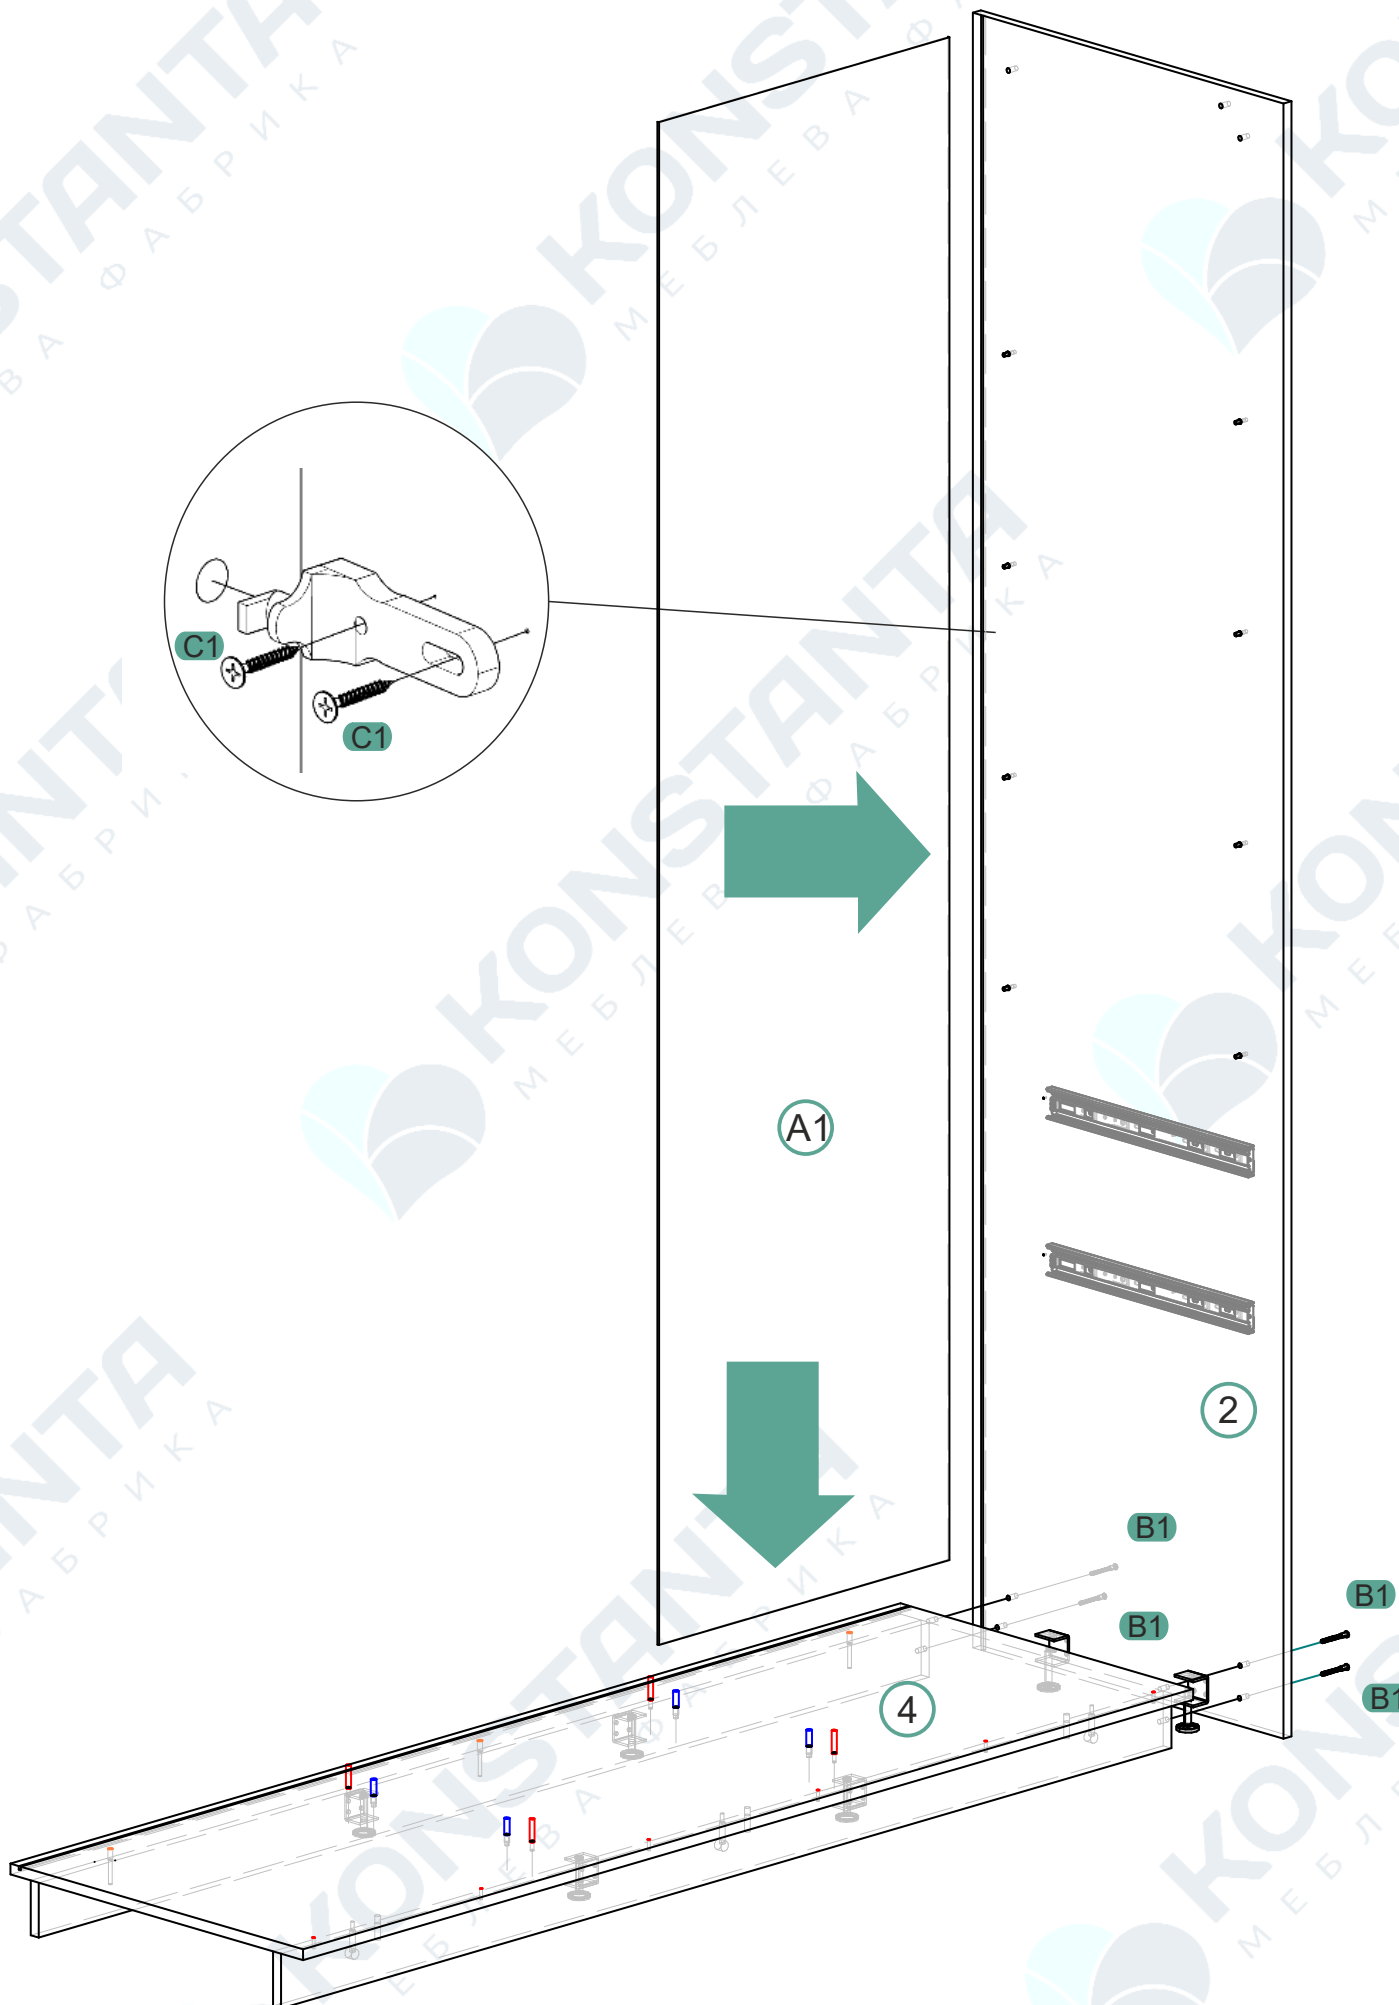 


7

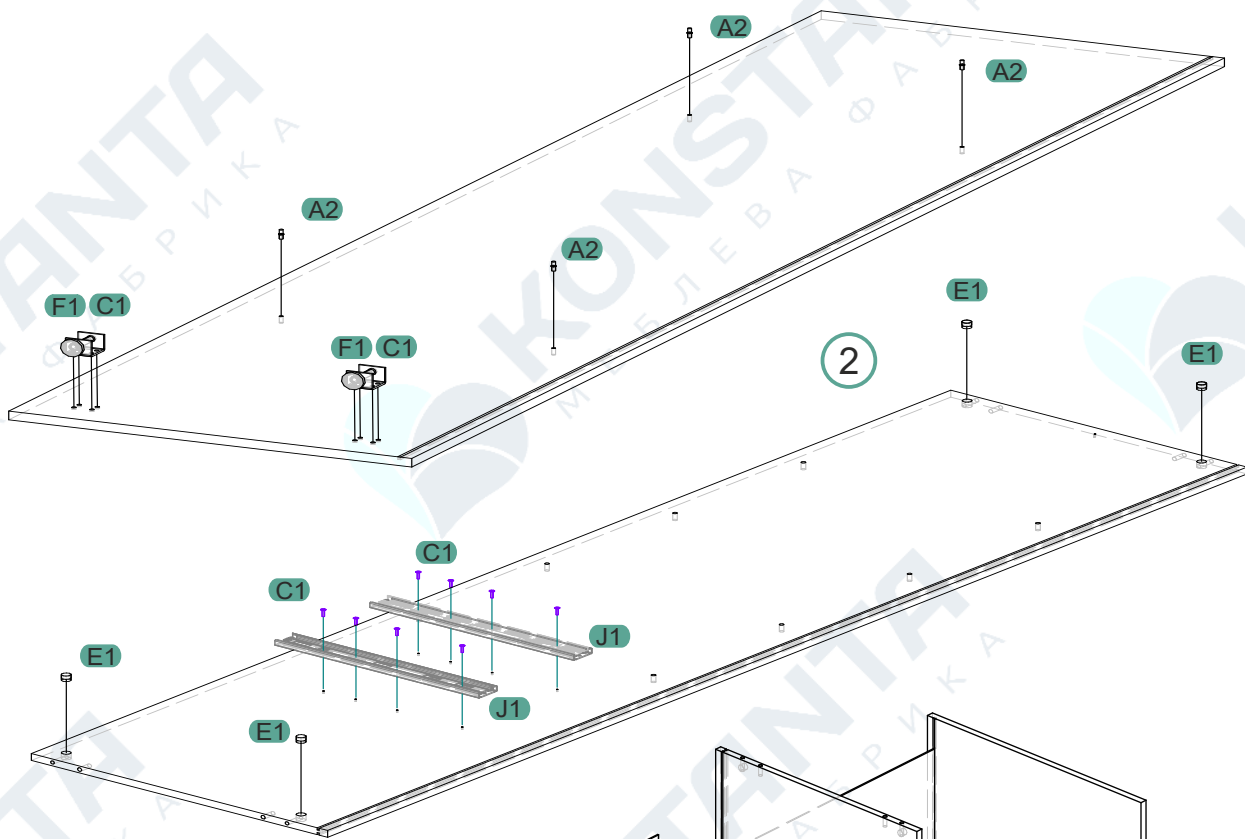 


8

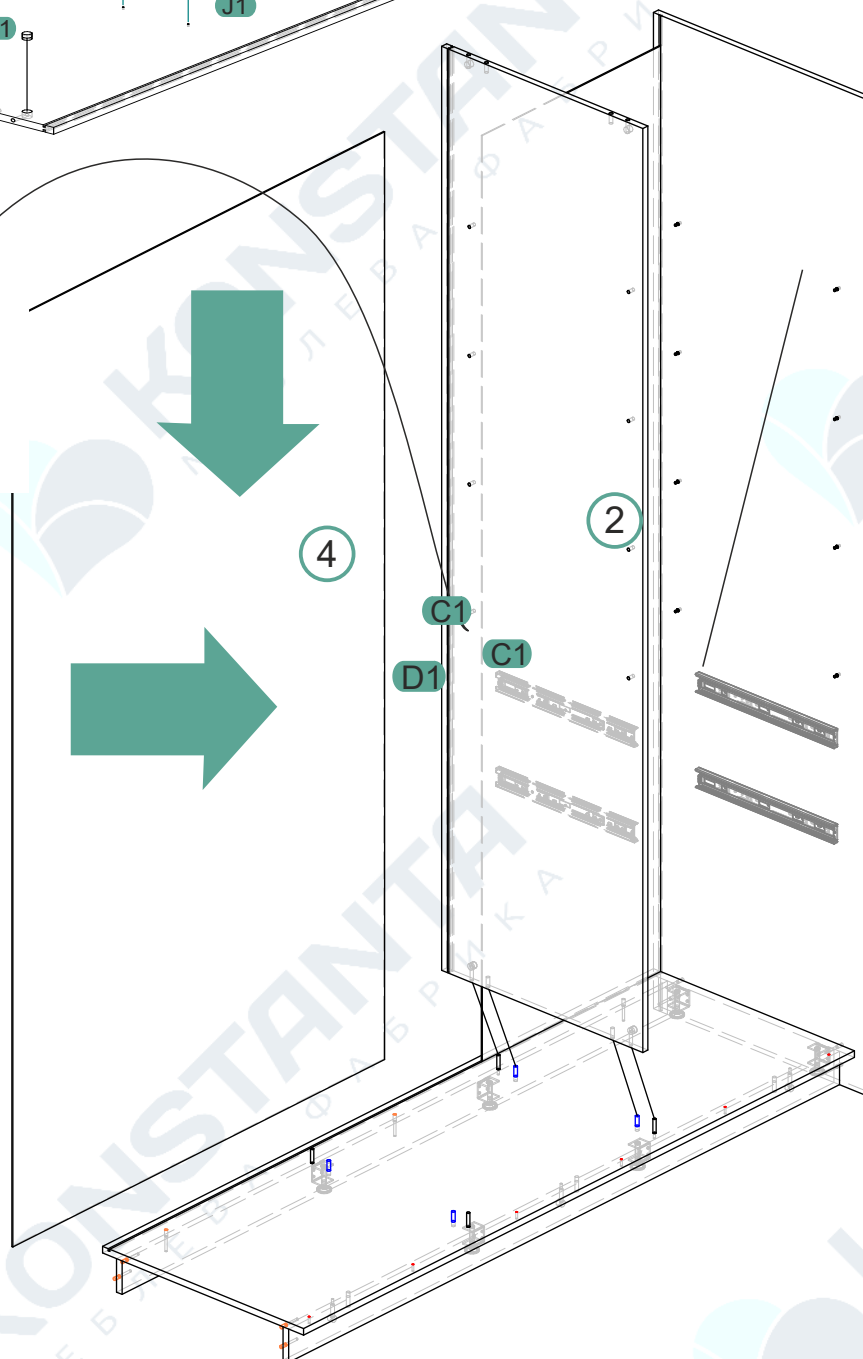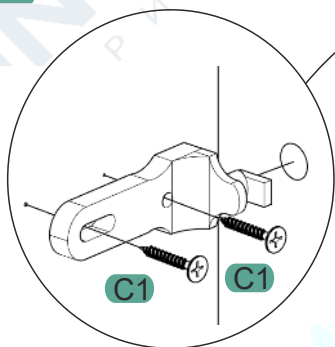  



5

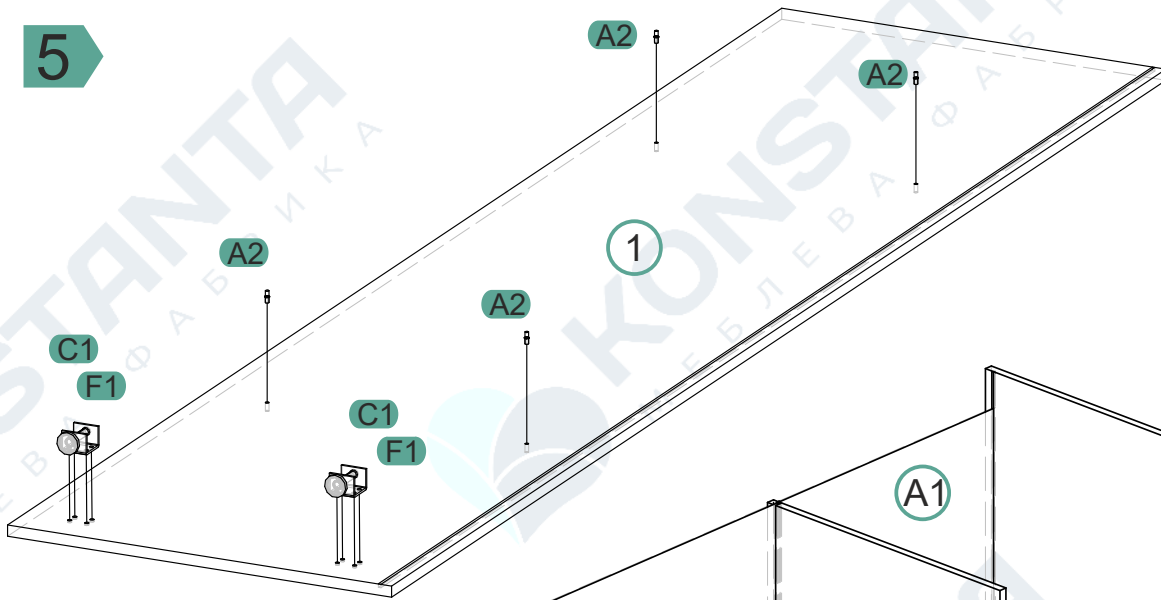 


6

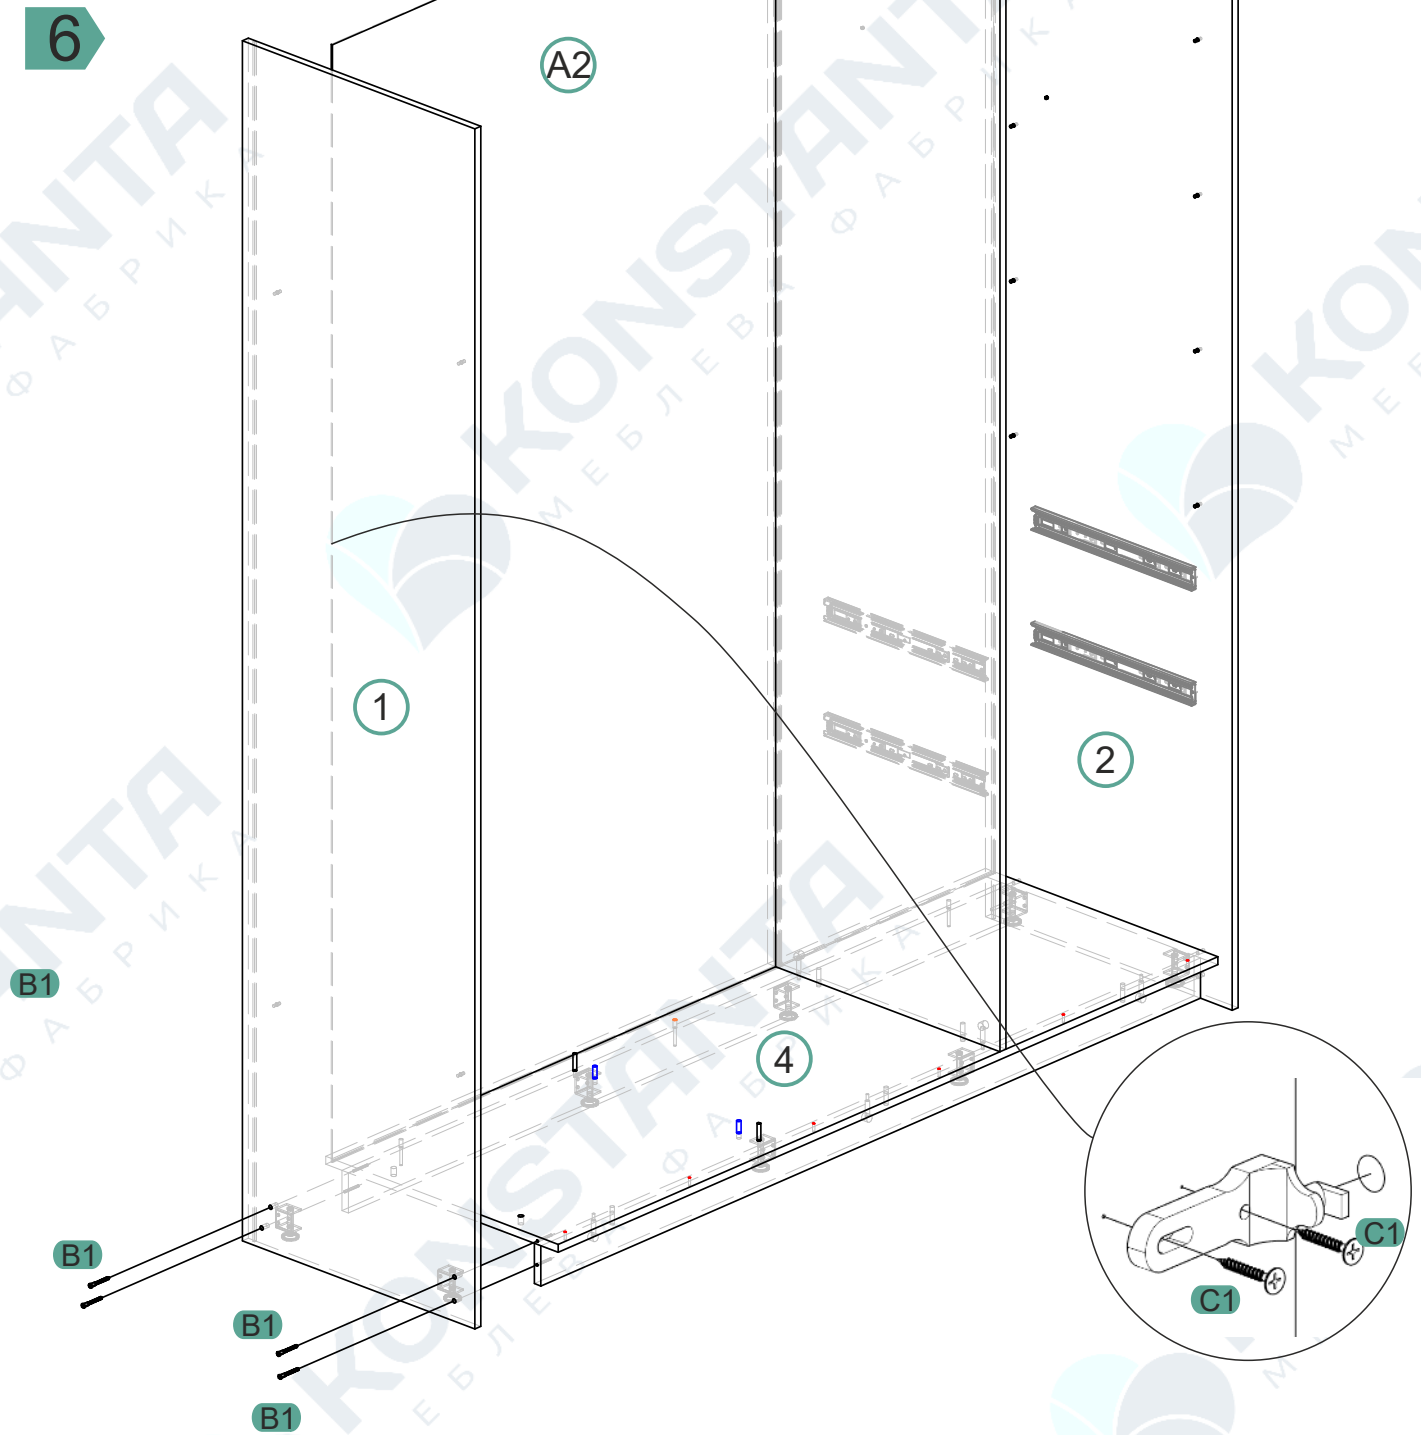 

7

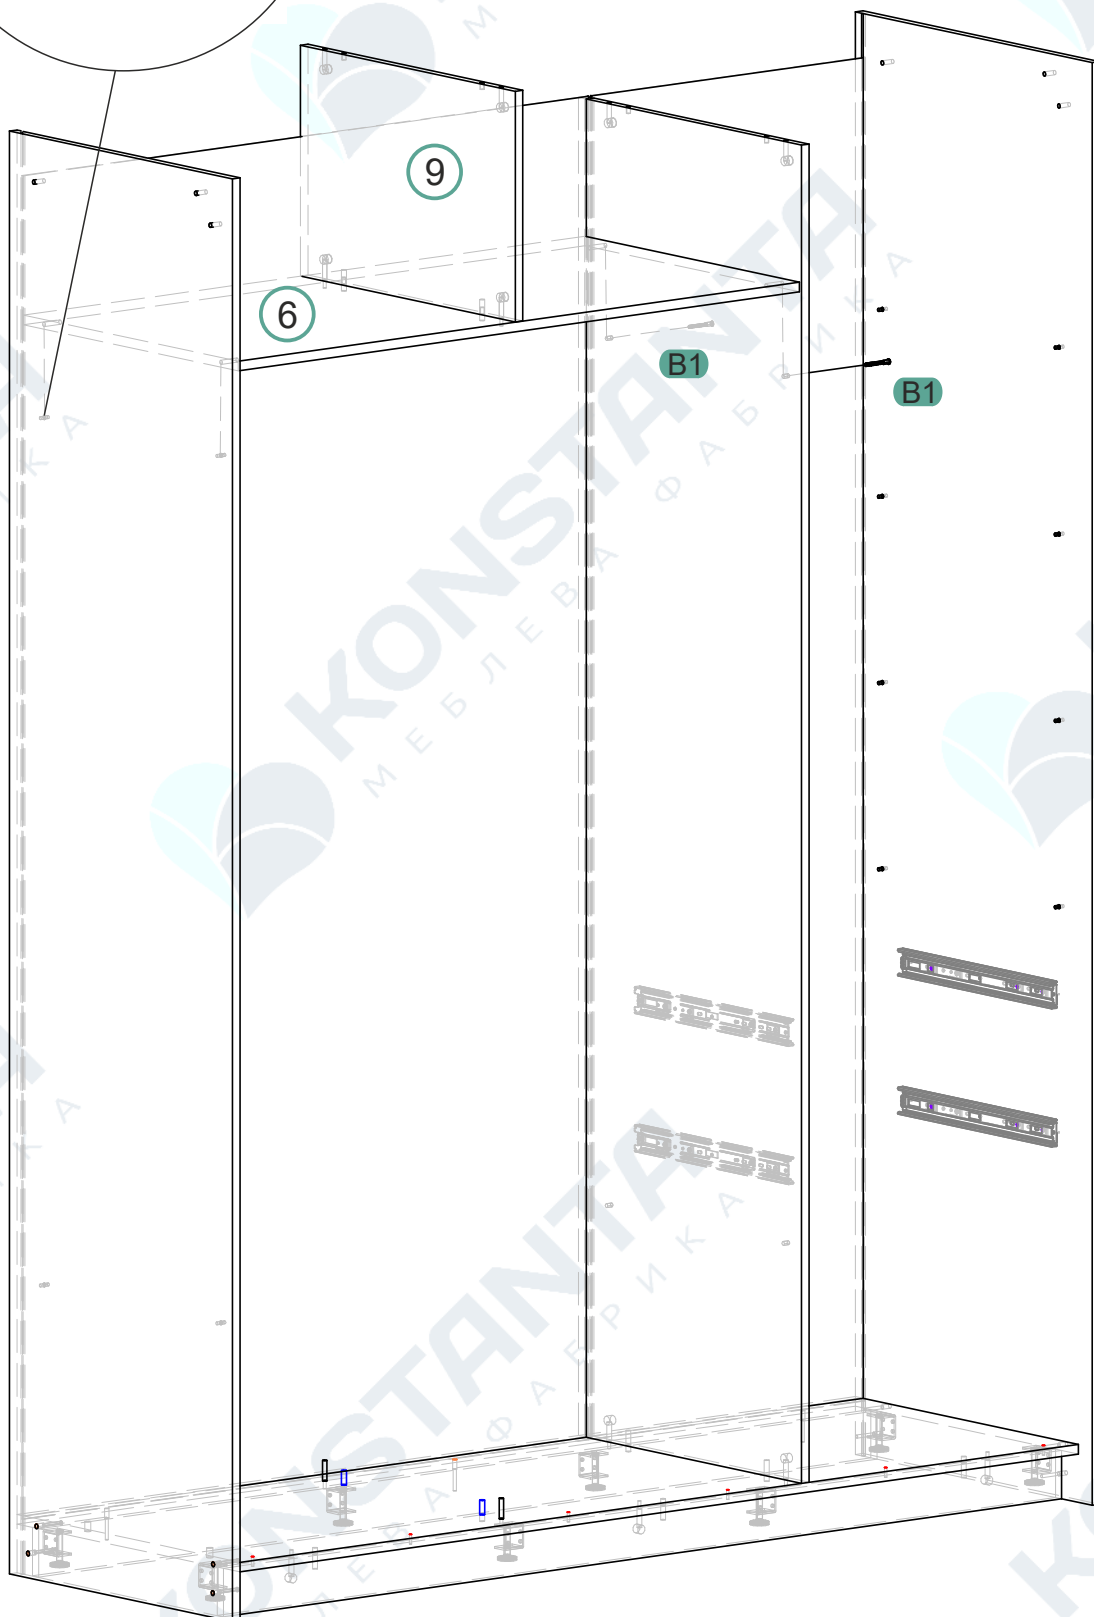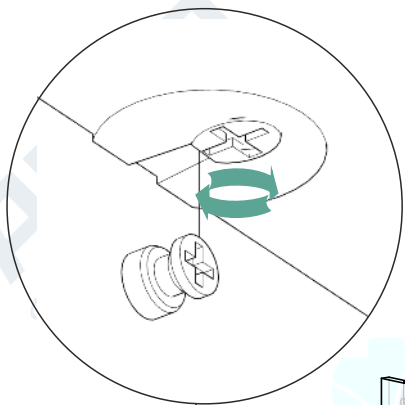  

8

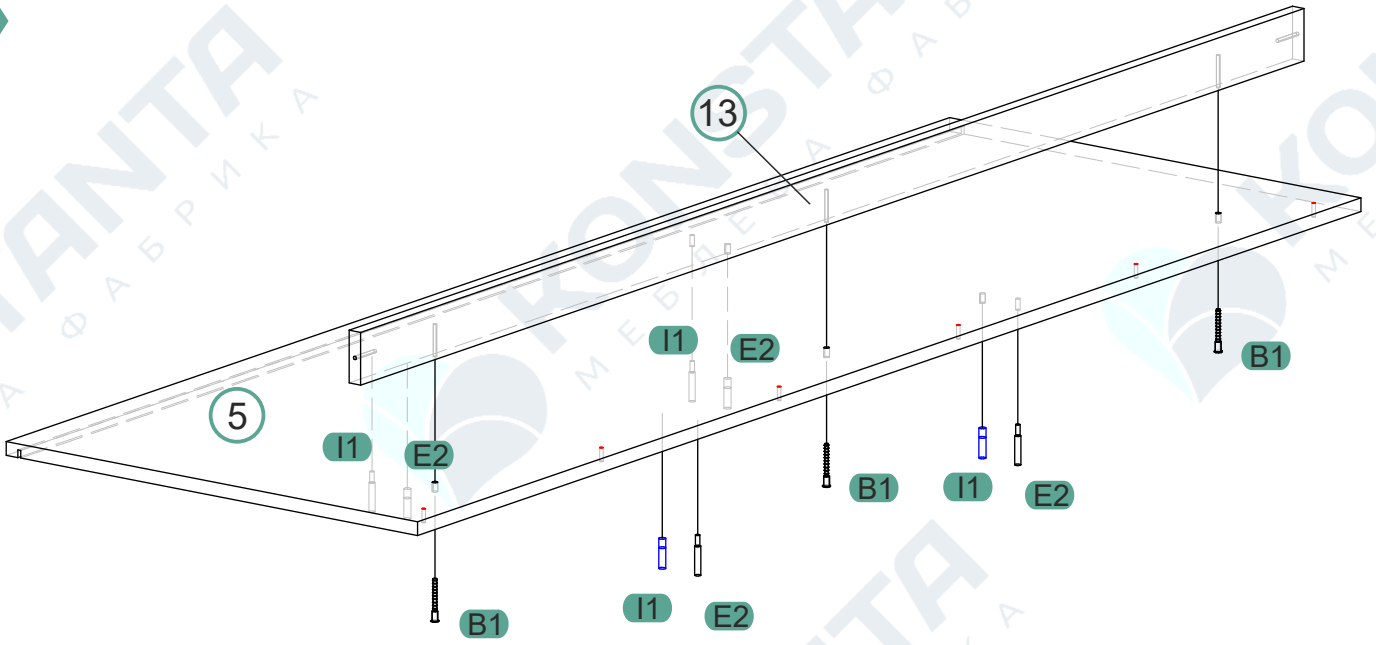 

9

