 
 
 
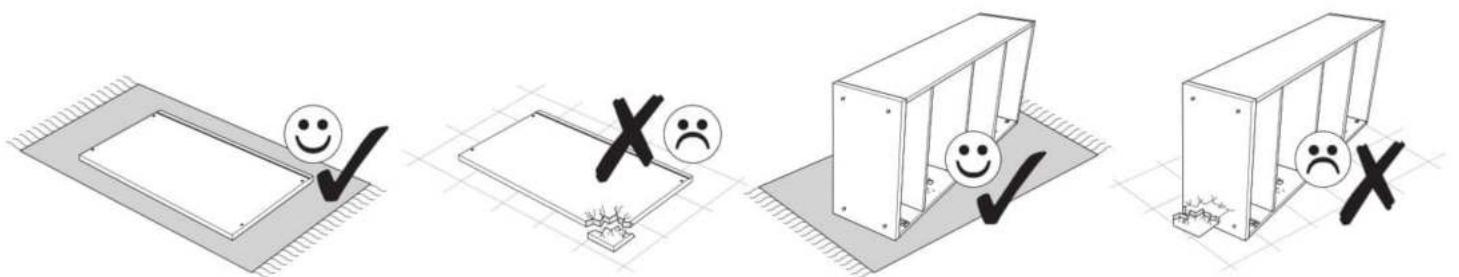 
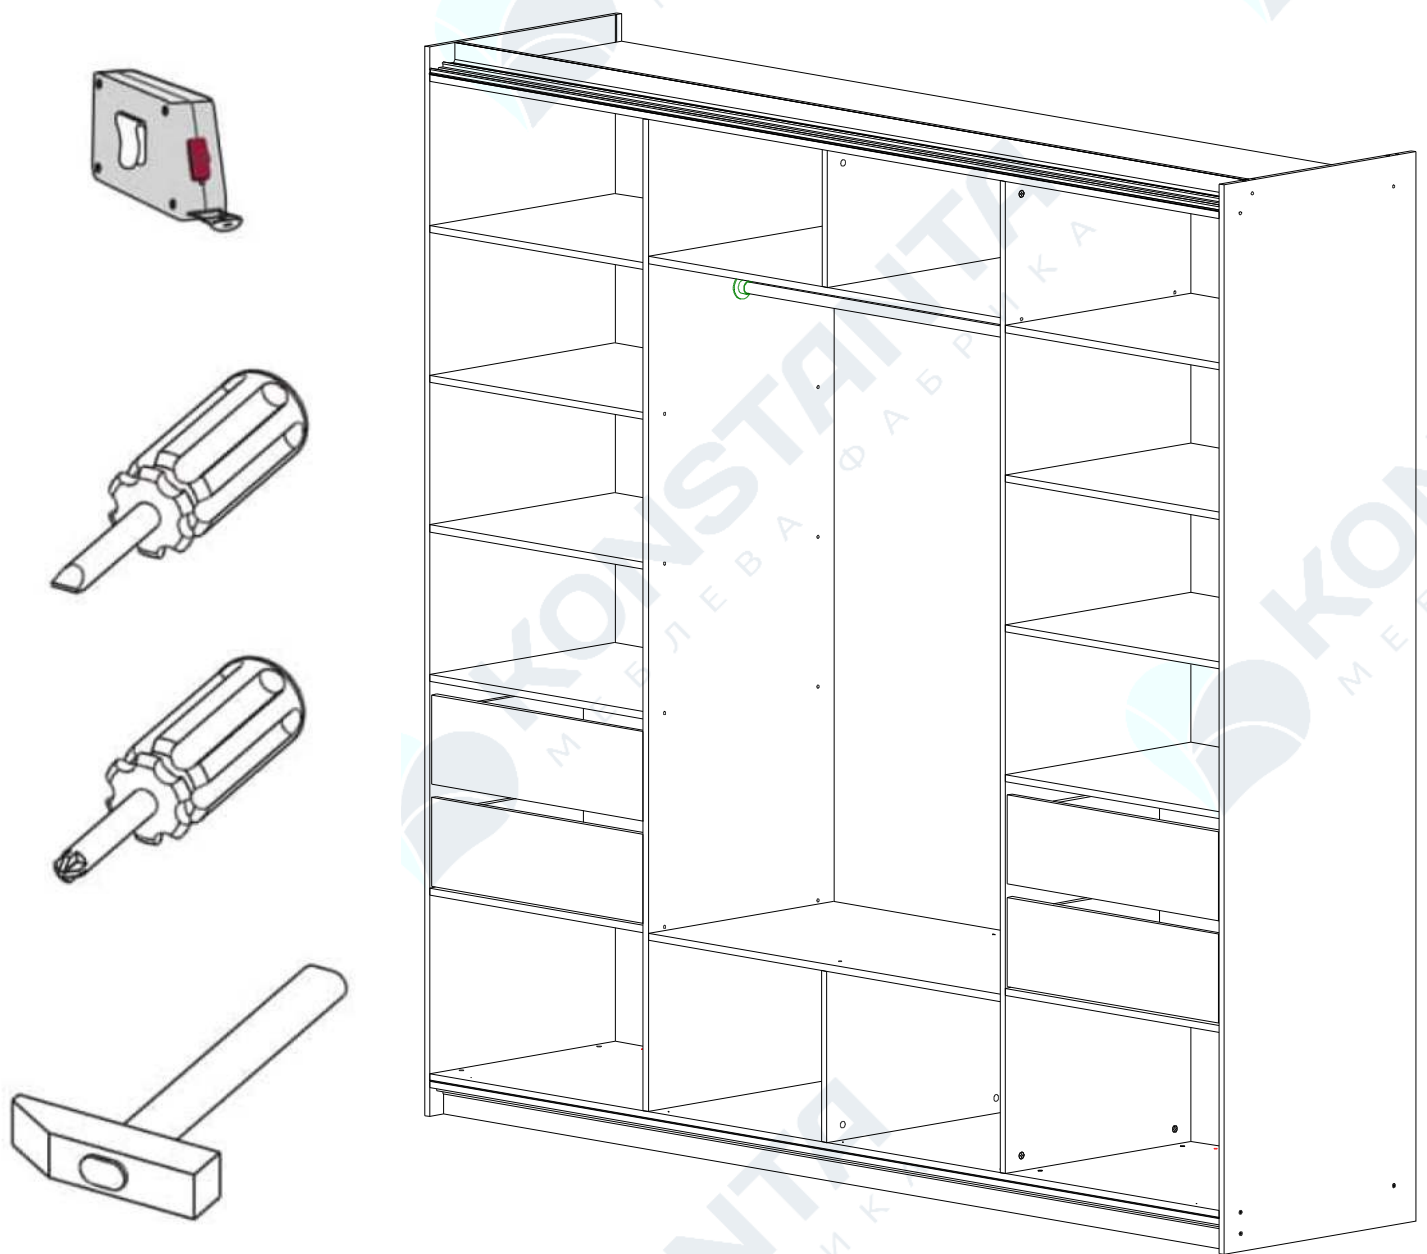 
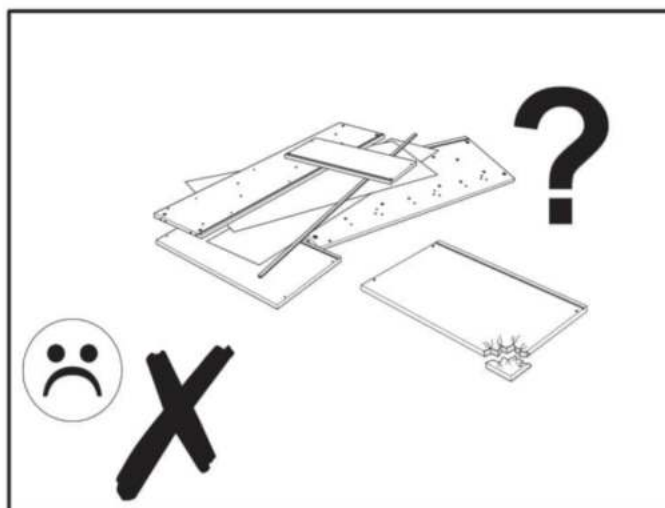 
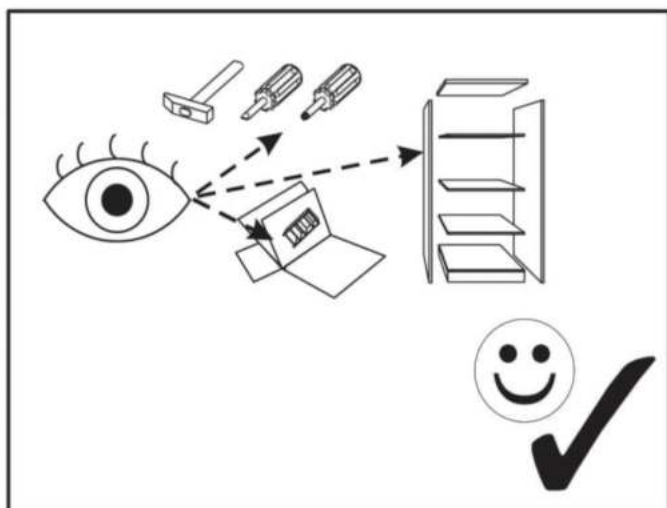 
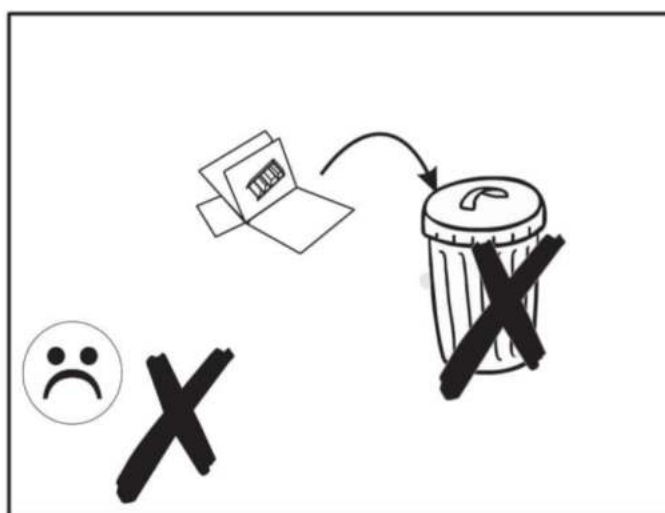 
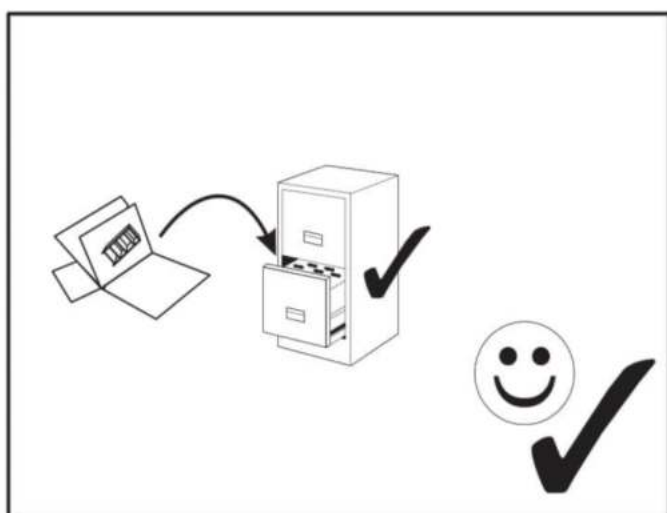 
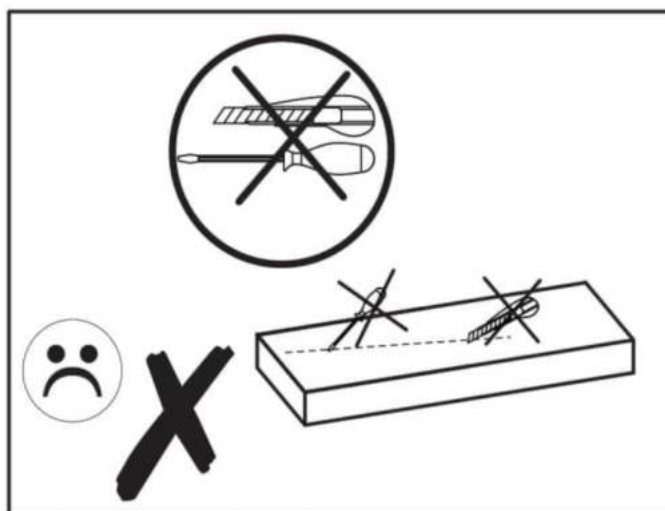 


ERGOSENS LUX

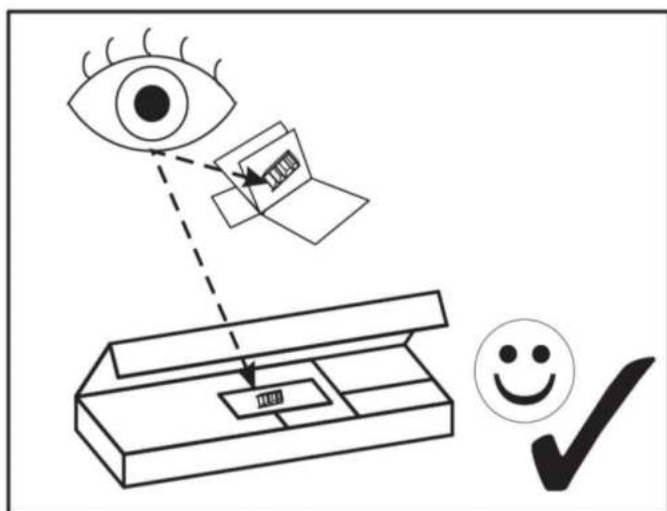 




Що знадобиться для збирання.

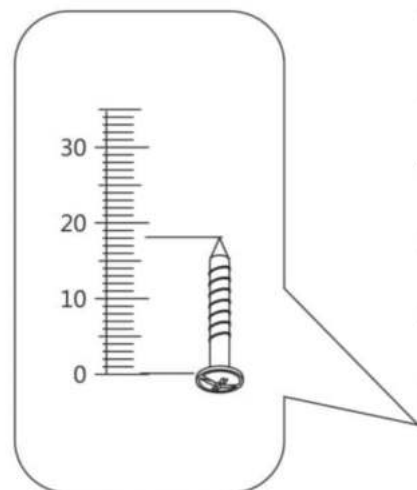








Елементи меблів.

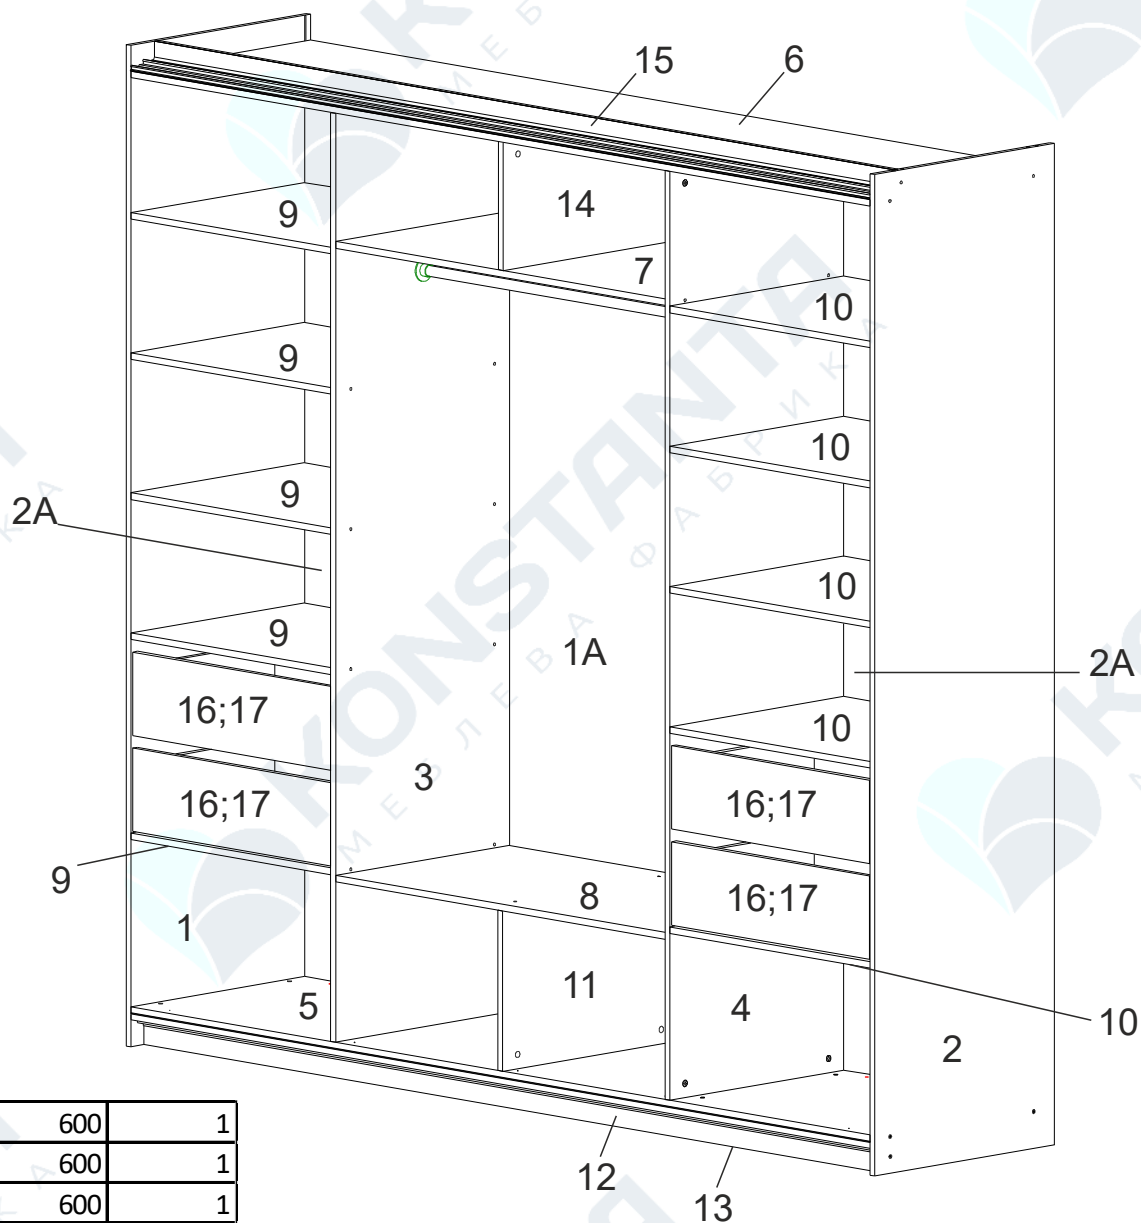


1	2468	600	1
2	2468	600	1
3	2400	600	1
4	2400	600	1
5	2227	600	1
6	2227	600	1
7	1100	579	1
8	1100	579	1
10	668	579	5
11	668	579	5
12	384	579	1
13	2468	80	1
14	2468	80	1
15	307	579	1
16	2468	61	1
17	Шухлядка		4
18	199	661	2

1A	2236	1108	1
2A	2236	676	2

       
1

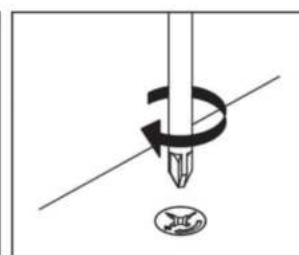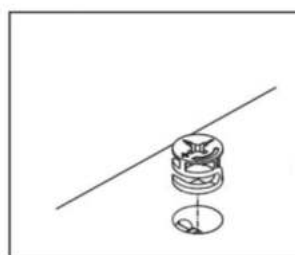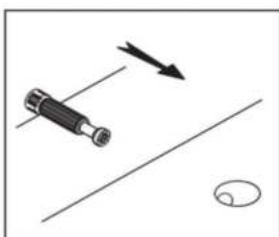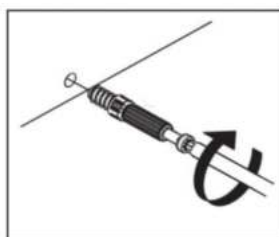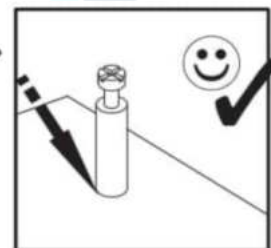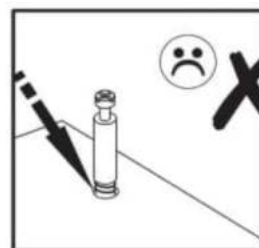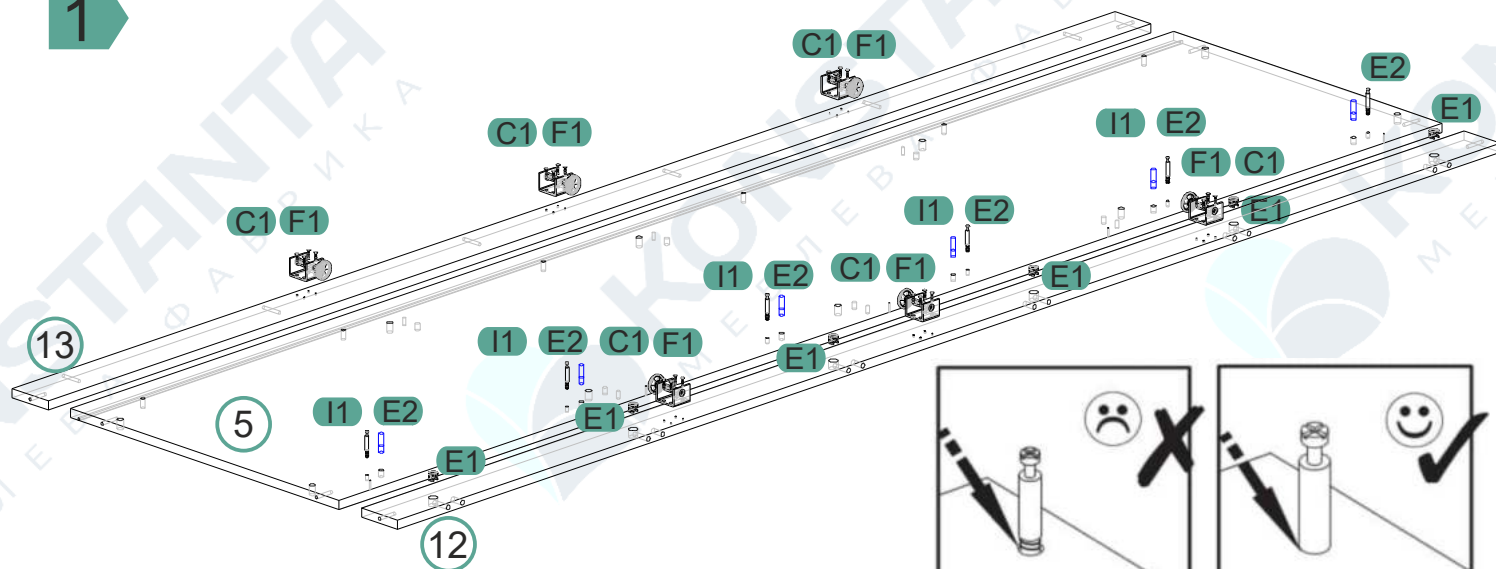


2

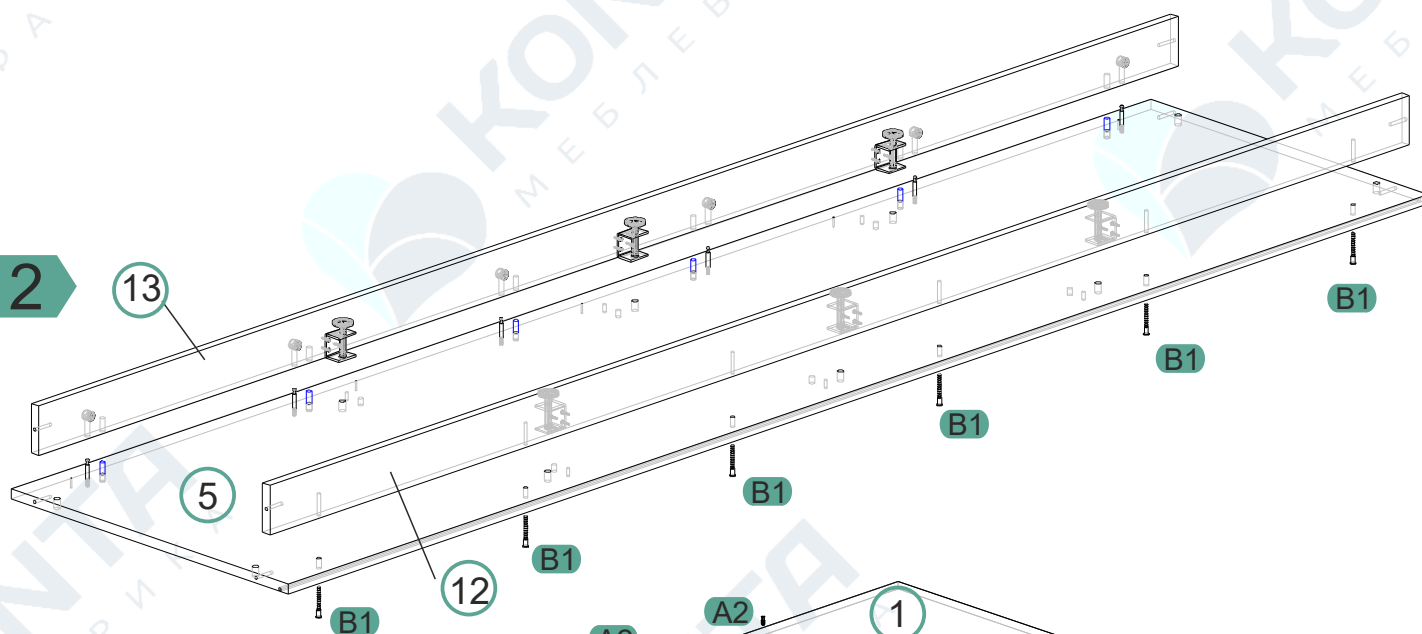 



3

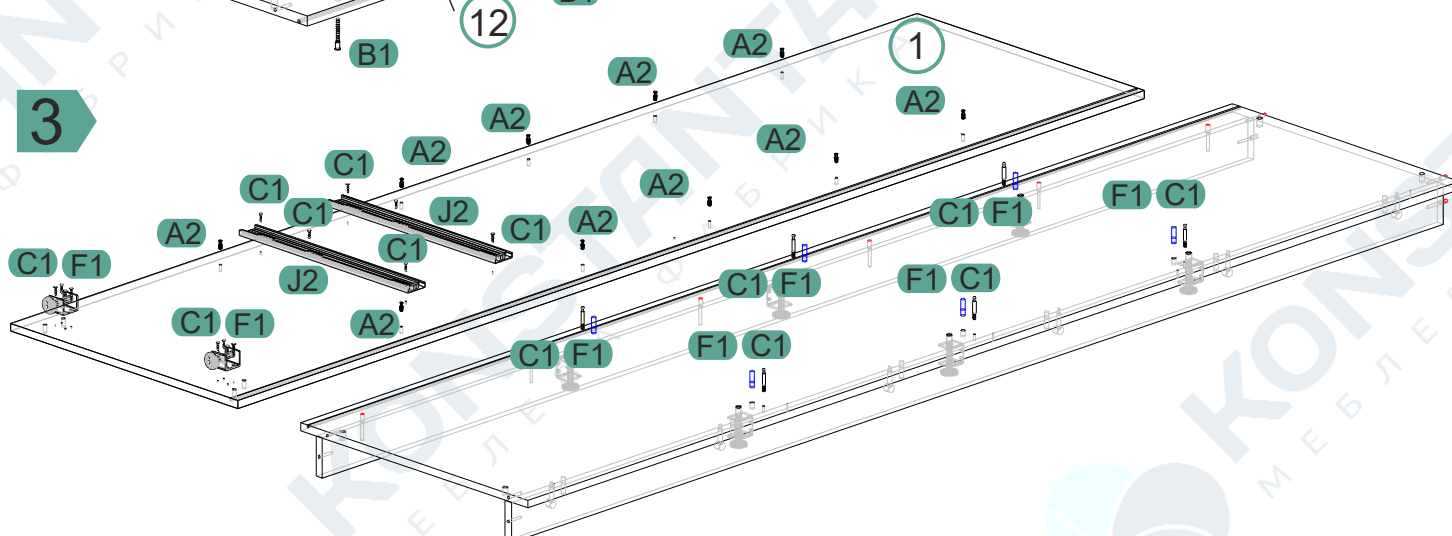 


4

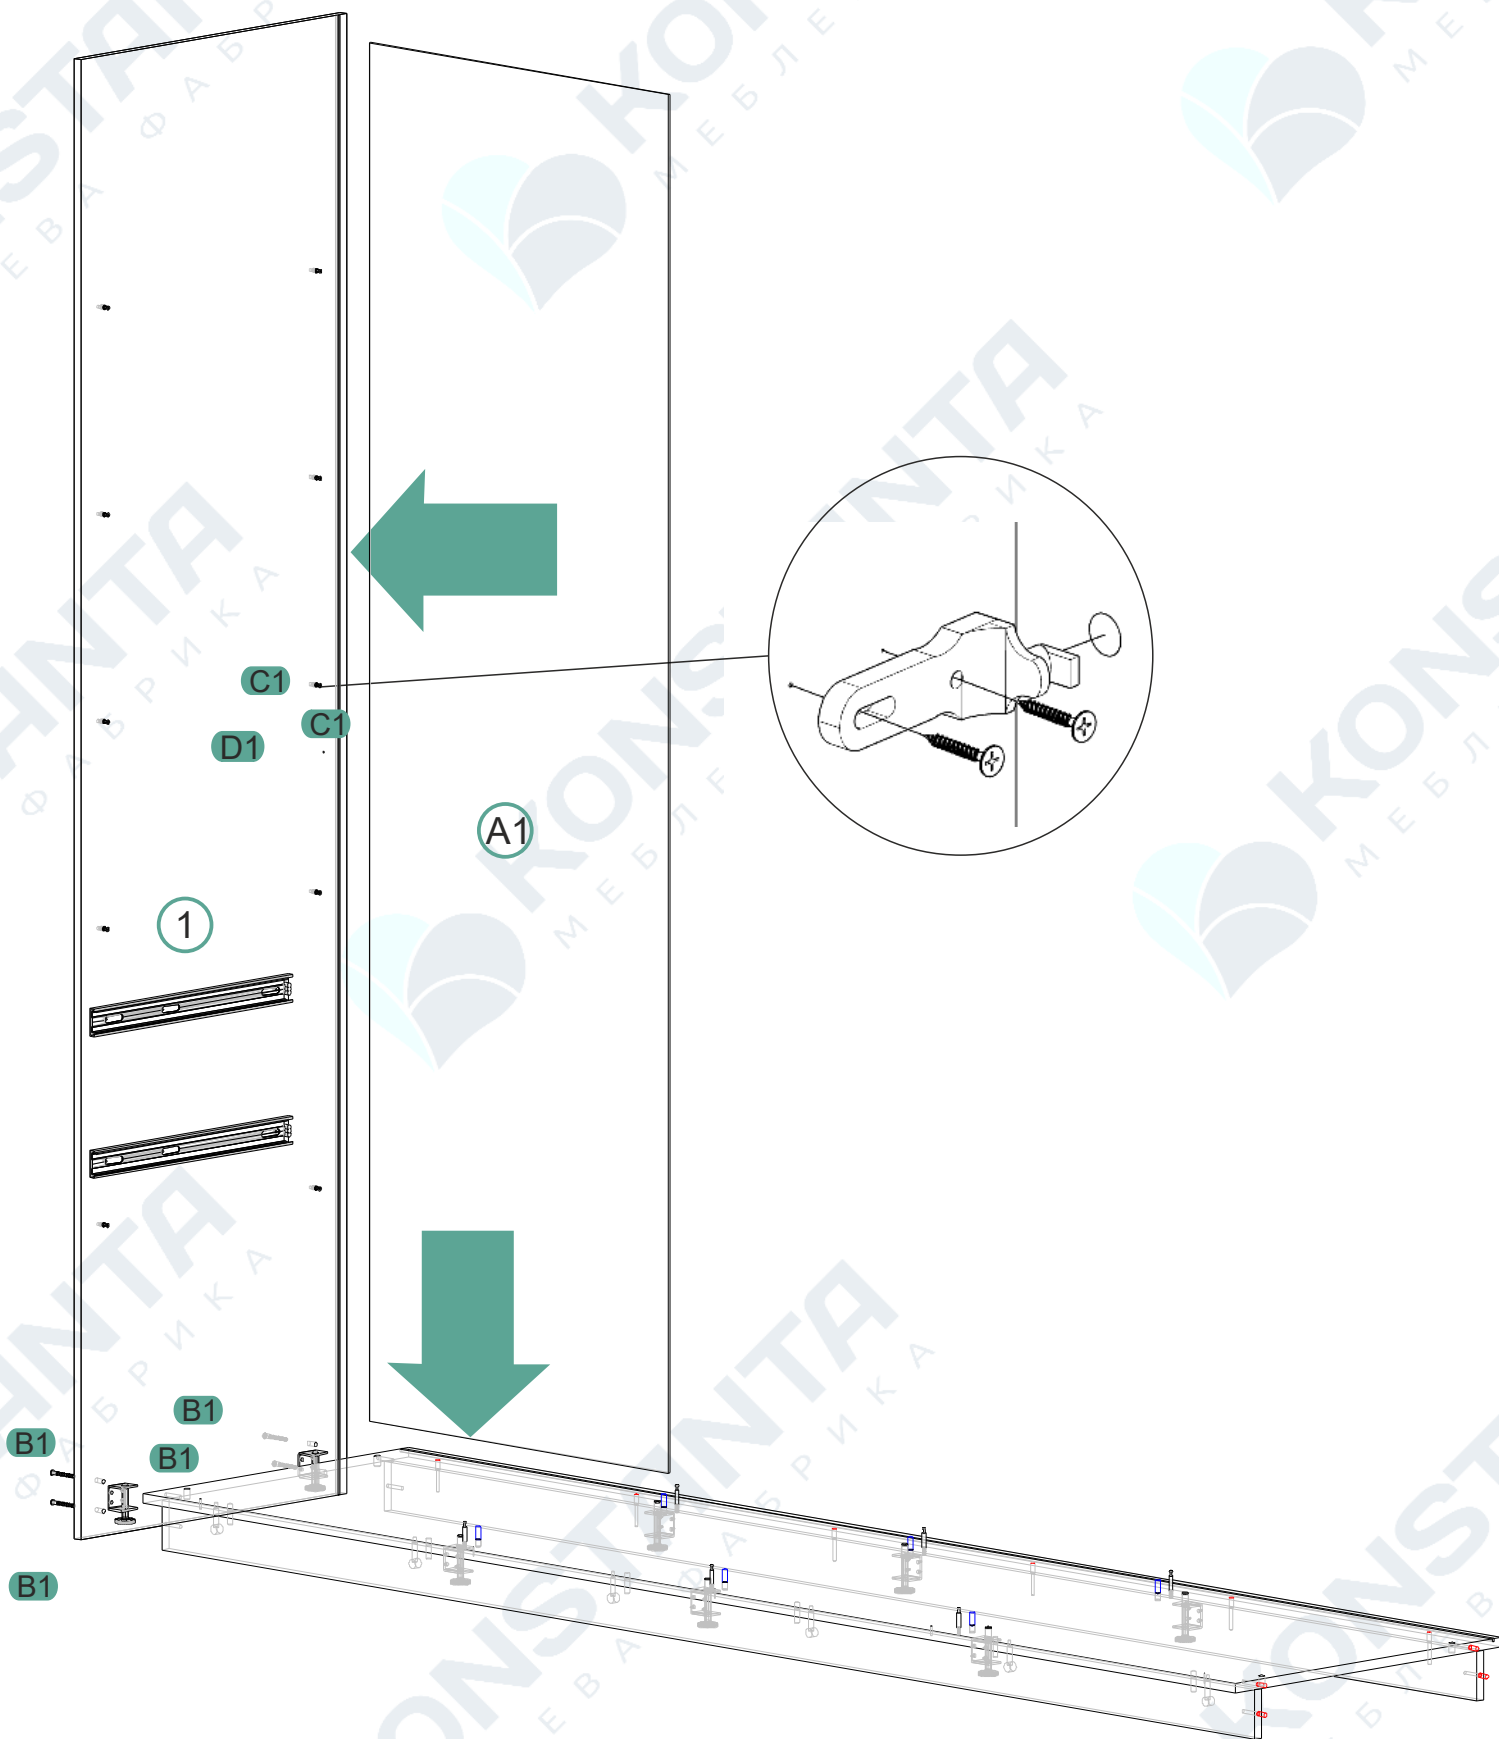 


5

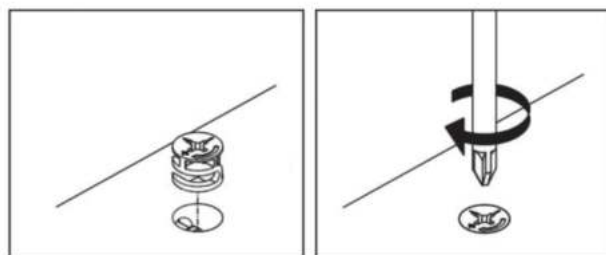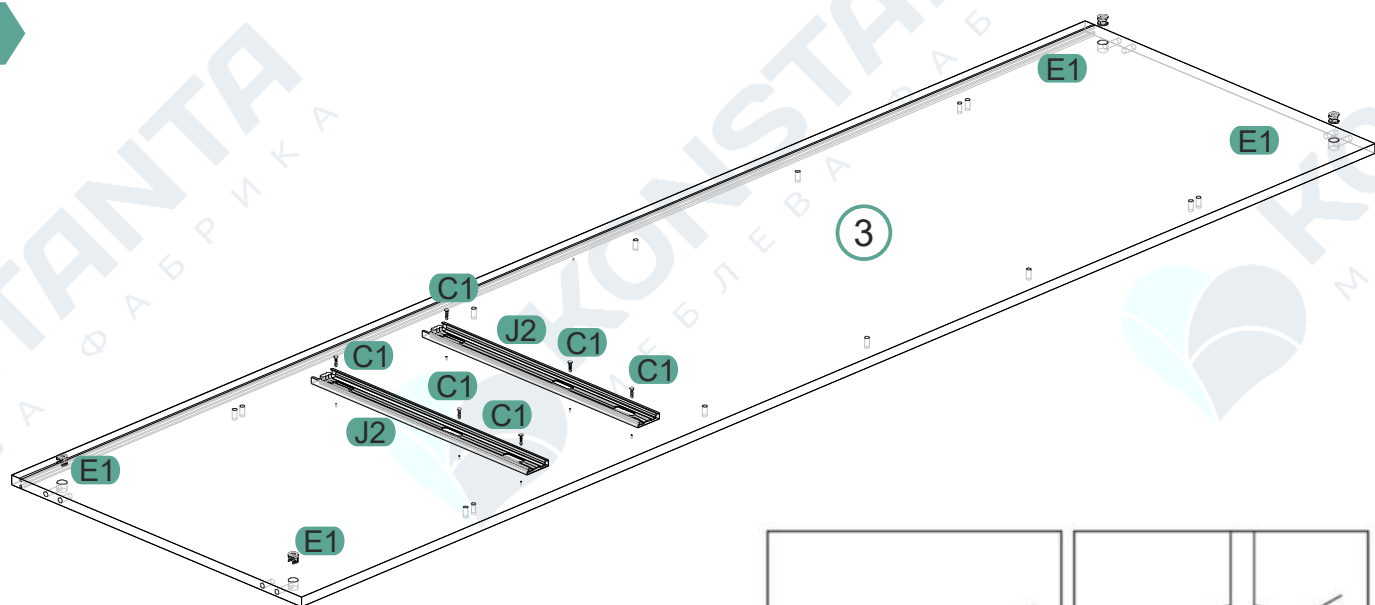  


6

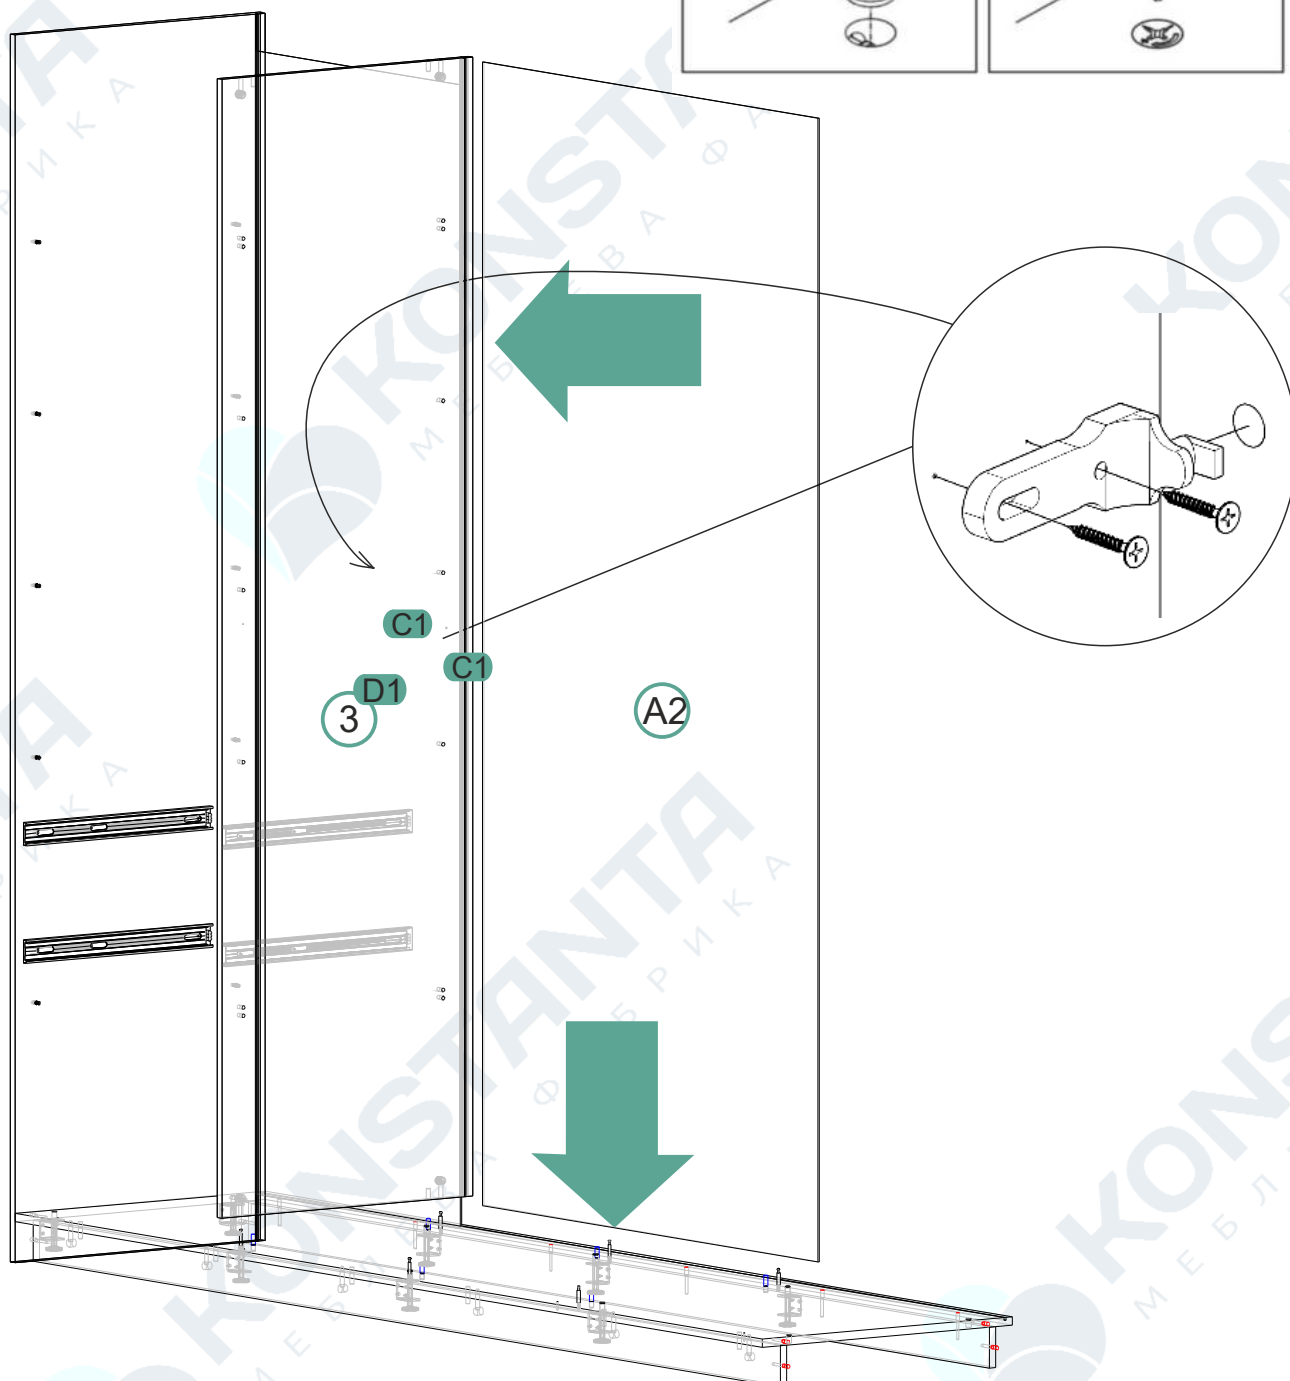 



7

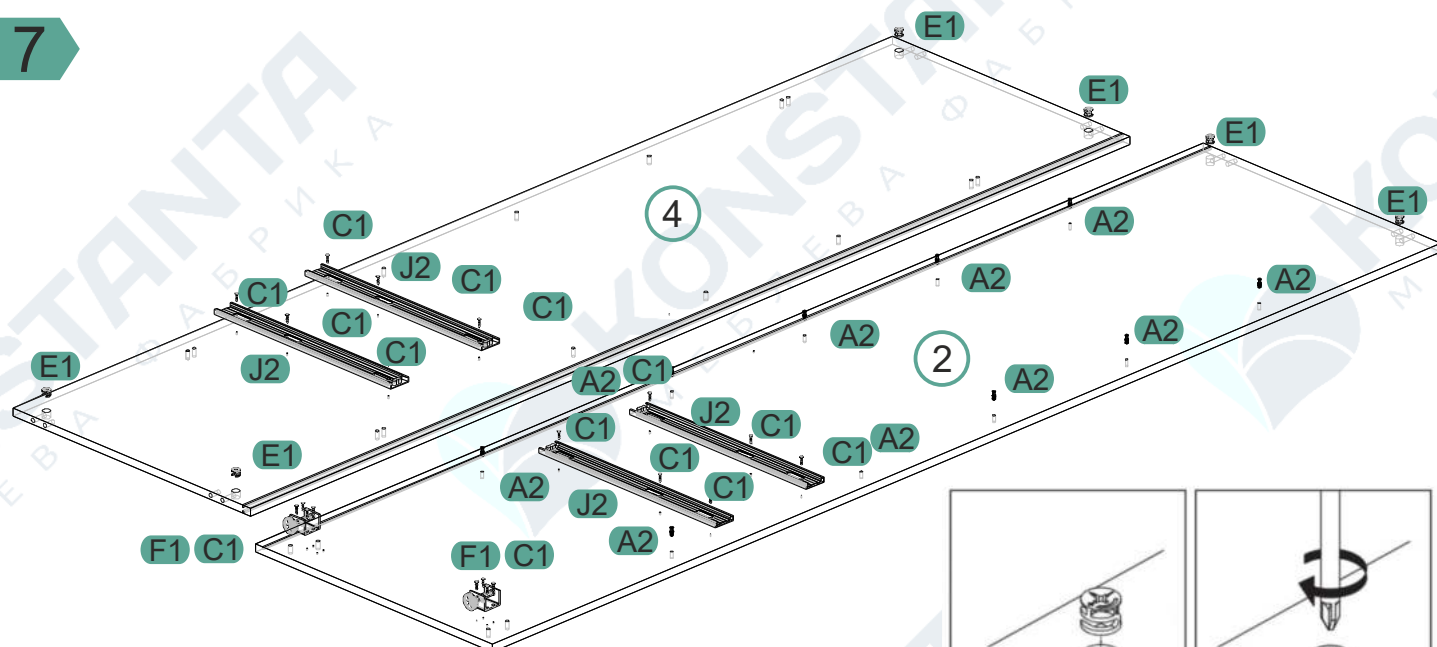 

8

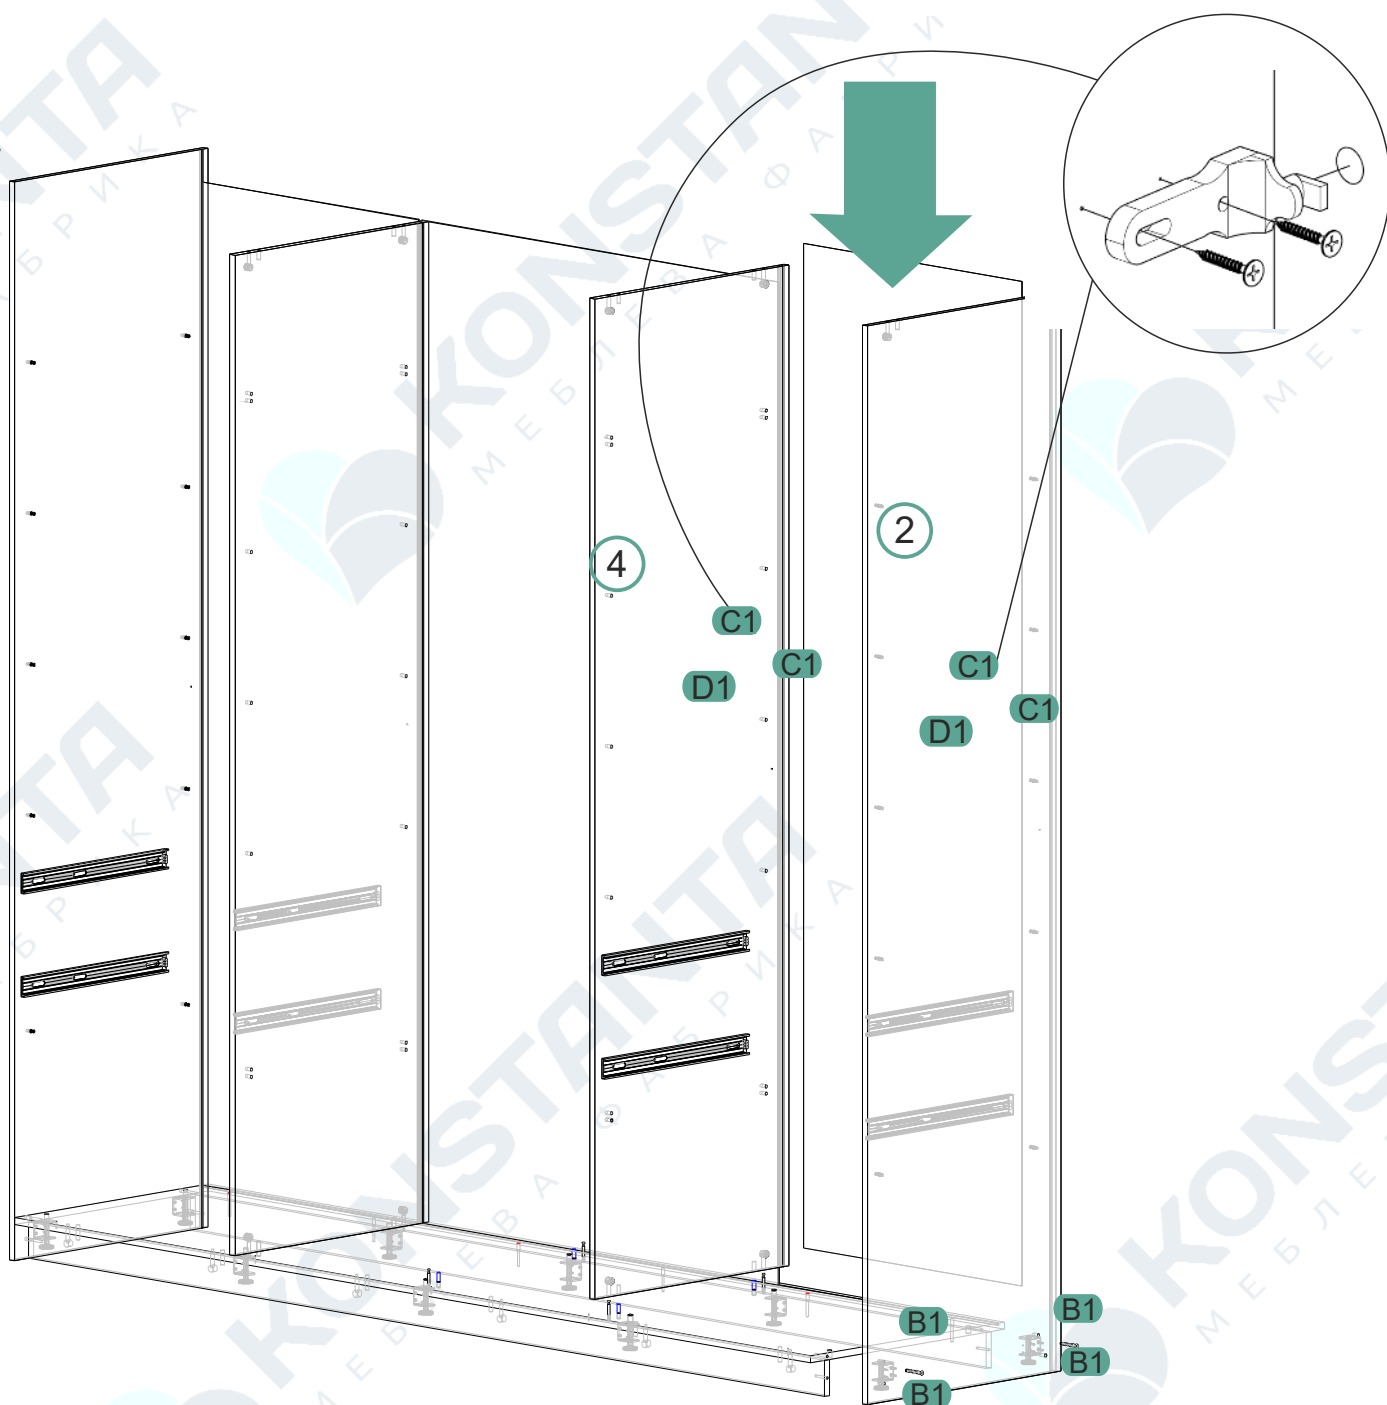 


9

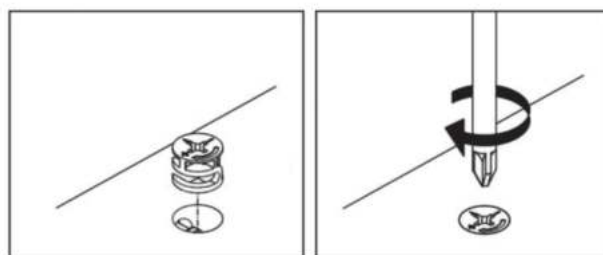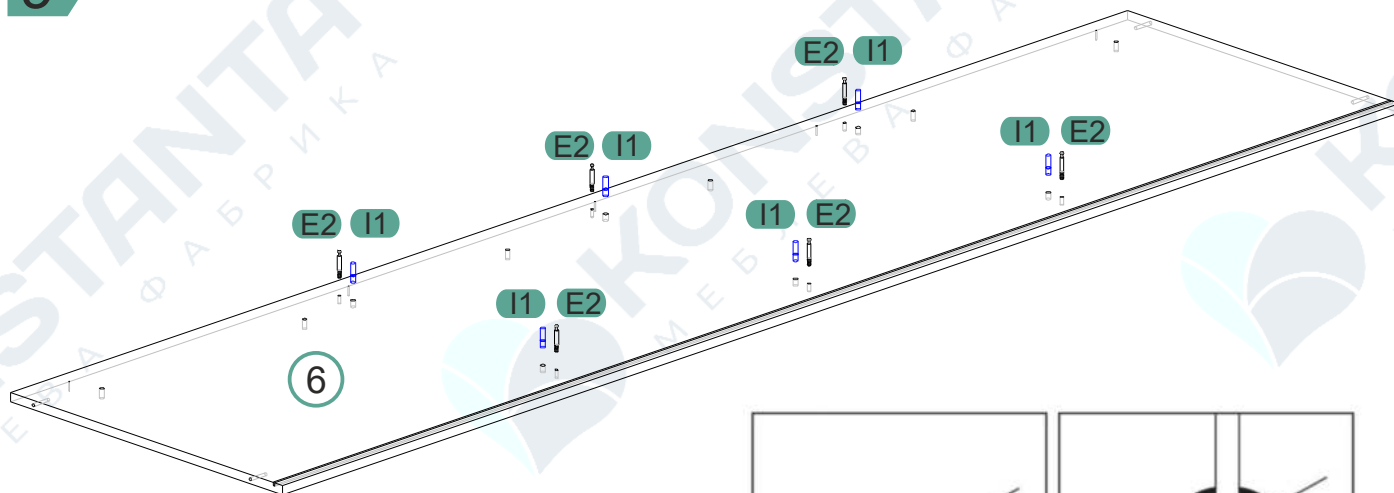  


10




   11

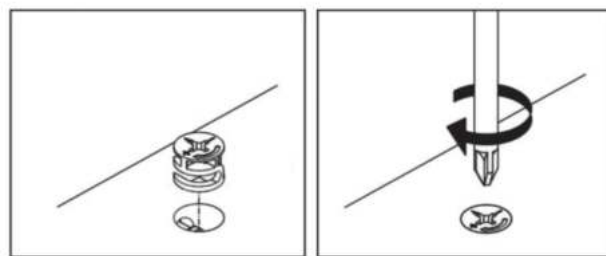

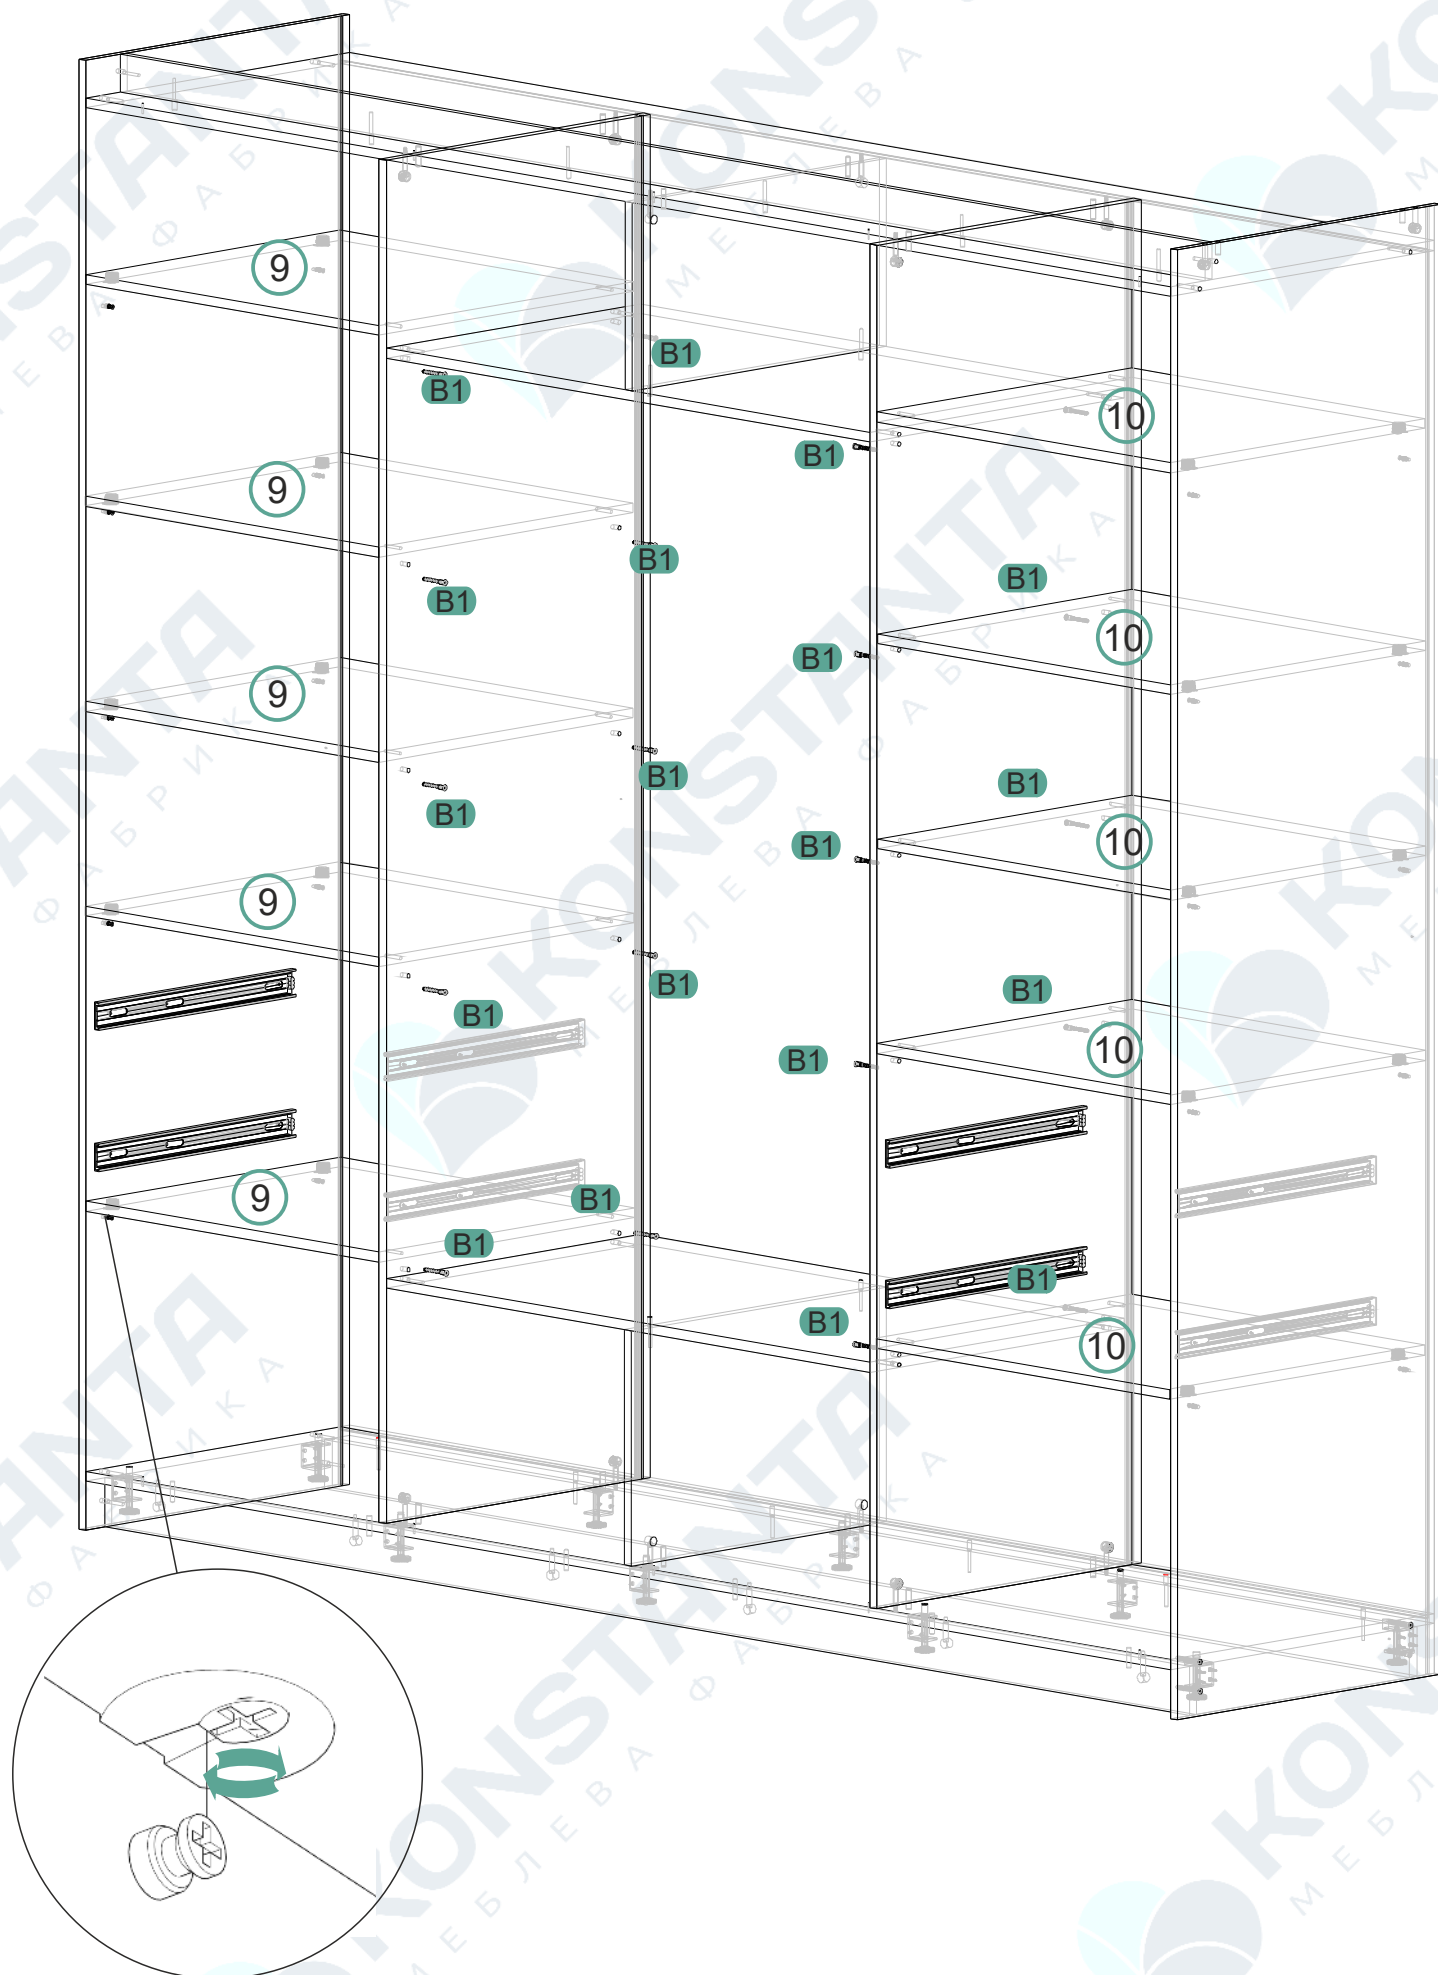



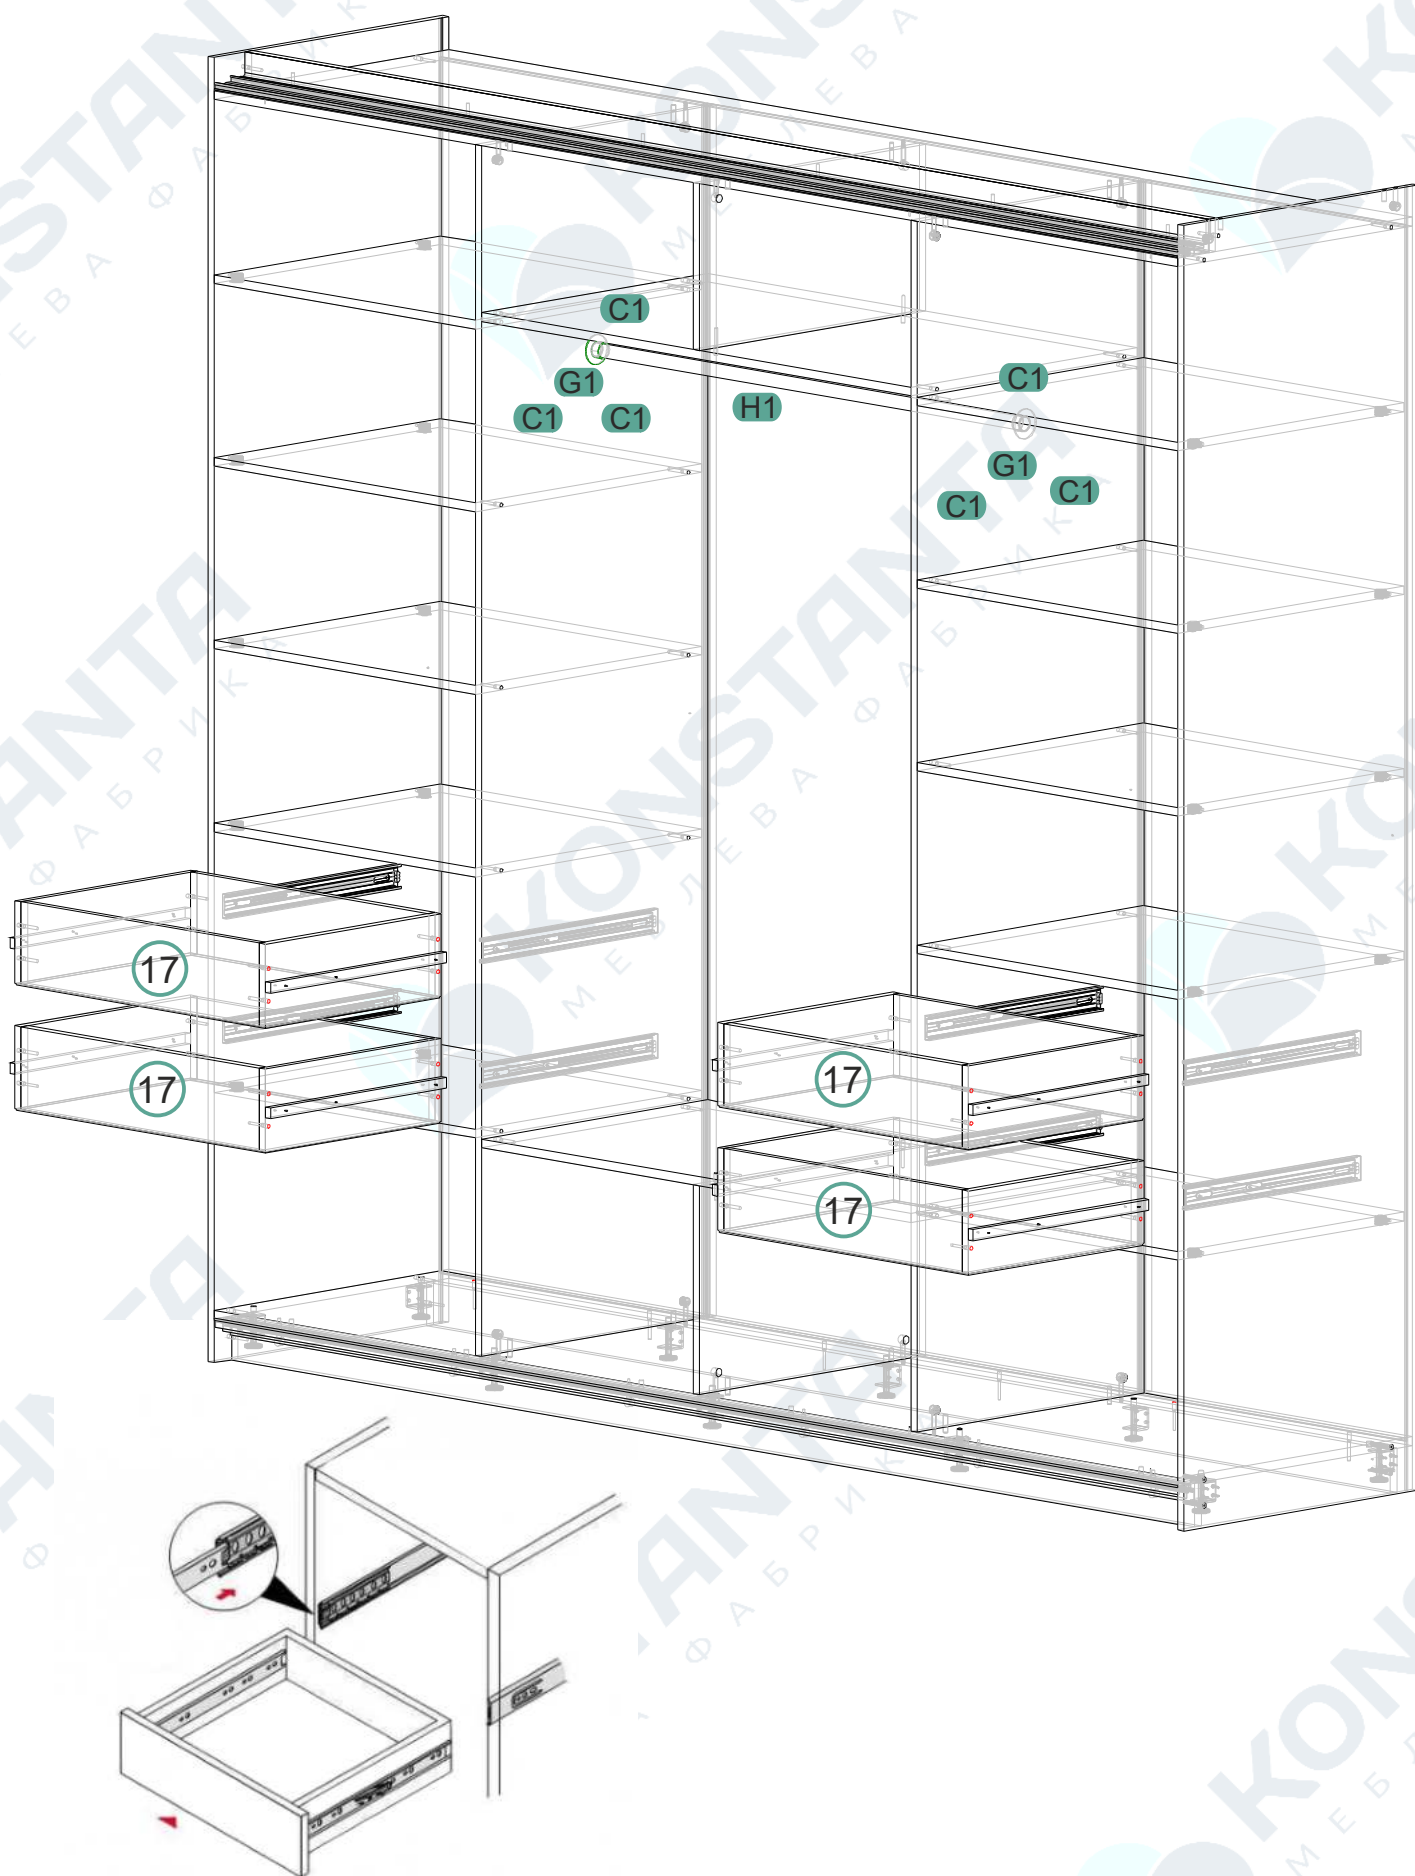

15

